PRESTIGE
serie

NL handleiding

EN instructions

DE anleitung

FR instructions

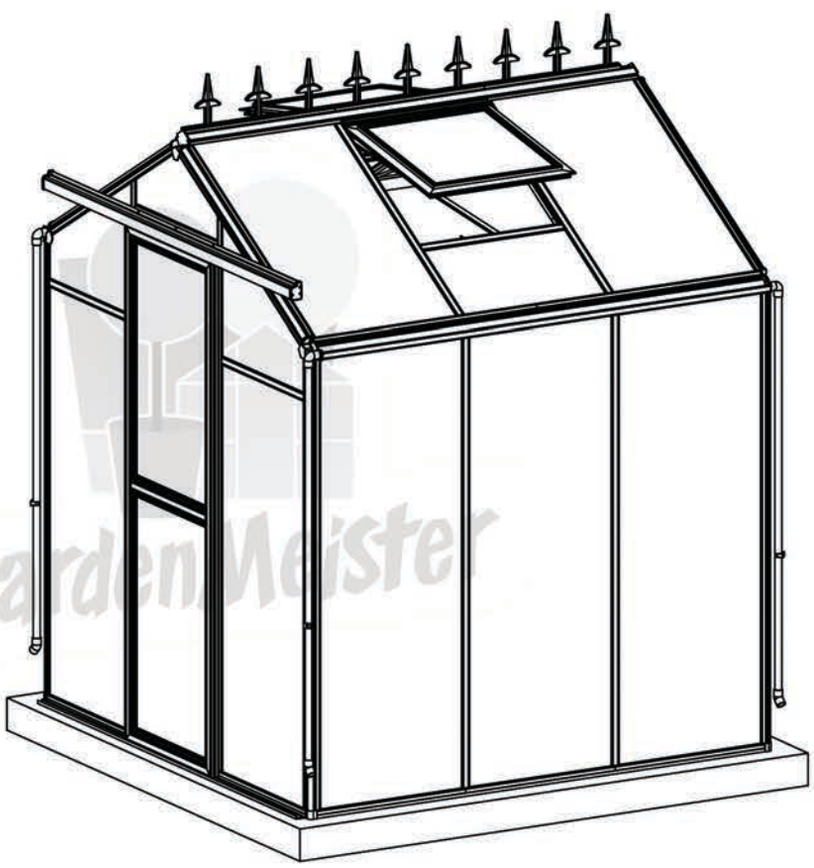

PRESTIGE 100 | PRESTIGE 300 | PRESTIGE 500 | PRESTIGE 700

MONTAGE ADVIES

montage en onderhoud

NL

1. For safety purposes, we strongly recommend that this product is assembled by at least two people.
2. Some components have sharp metal edges. Please be careful when handling metal components. Please wear gloves, shoes and safety goggles during assembly.
3. Lay all of the components on a soft carpet or blanket to avoid any scratches or damages.
4. DO NOT climb or stand on the roof. Heavy articles should not be leaned against the greenhouse.
5. Keep the roof and gutter clear of snow, dirt & leaves. Allowing snow to build up on the roof may damage the product.
6. Unlike steel, if the paint finish is scratched this will not harm the aluminium underneath.
7. When your product needs cleaning, use a mild detergent solution and rinse with cold clean water. Do not use acetone, abrasive cleaners or strong detergents to clean the panels.

ONDERDELENLIJST

pakket 1

NL

Front Wall Assembly

PART	NO	QTY
	L01A	1
	L01B	1
	L01C	1
	L01D	1
	L03E	1
	L03F	1
	L04A	2
	L05A	2
	L10	1
	L11A	4
	L11B	4
	L11D	2
	L11E	1
	L12C	1
	L12D	1
	L12G	2
	L23	1
	L14	1

Back Wall Assembly

PART	NO	QTY
	L01A	1
	L01B	1
	L01C	1
	L01D	1
	L03C	1
	L03D	1
	L04A	3
	L05A	2
	L05B	1
	L08B	1
	L11A	4
	L11B	4
	L11C	3
	L12C	1
	L12D	1
	L12G	3
	L13	1

3 Section

PART	NO	QTY
	L06A	1
	L07A	2
	L08B	2
	L09A	2
	L02A	4
	L02B	4
	L04A	2
	L05C	6
	L05D	4
	L22	6
	L22B	2
	L11C	6
	L12A	4
	L12B	4
	L12G	2

Parts

PART	NO	QTY
	A	6
	B	8
	C	4
	D	2
	J01	2
	J02R/L	2/2
	J03R/L	1/1
	J04	4
	J05	4
	J06	4
	J07	4
	J08	4
	W01	6
	W05	11
	W06	2
	W08	2
	W09	2
	S03 M8X60	11
	S04 M6X20	5
	S01 M6X10	131
	M01 M6	136
	S02 M8X30	2
	M02 M8	2
	Z01 Ø4X14	183
	Z02 Ø4X14D	28
	Z03 Ø4X10	5
	Z04 Ø4X40	5

Door Assembly

PART	NO	QTY
	L16A	4
	L16B	4
	L17	1
	L18A	2
	L18D	2
	L21C	4
	L21D	4

Window Assembly

PART	NO	QTY
	L15A	2
	L19A	4
	L19B	2
	L20	2
	L21A	4
	L21B	4

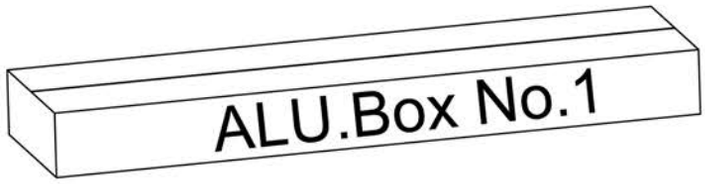

GardenMeister

ONDERDELENLIJST

polycarbonaat / glas nr. 1

	Y1	2
	Y2	5
	Y3	1
	Y4	2
	Y5	1
	Y6	6
	Y7	4
	Y9	2
	Y10	2
	Y11	2

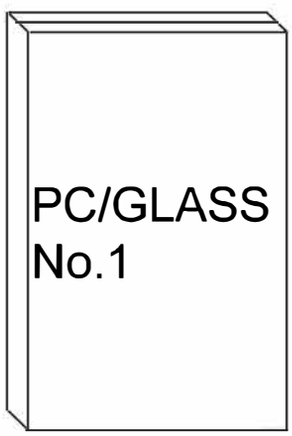

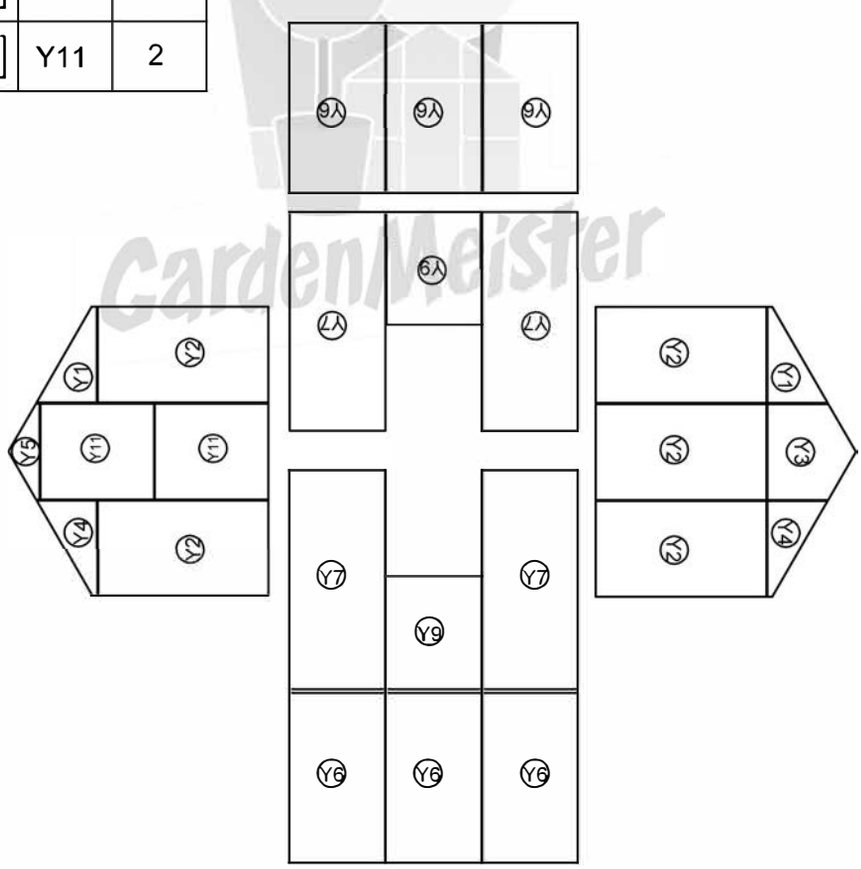

ONDERDELENLIJST

alu box nr 2, extensies

2 Section

PART	NO	QTY
	L06	1
	L07	2
	L08A	2
	L09	2
	L02A	2
	L02B	2
	L04A	2
	L05C	4
	L05D	2
	L22	3
	L22A	2
	L22C	6
	L11C	4
	L12A	4
	L12B	4
	L12G	2
	L03A	2
	L03B	2
	L27	1

Window Assembly

PART	NO	QTY
	L15A	2
	L19A	4
	L19B	2
	L20	2
	L21A	4
	L21B	4

Parts

PART	NO	QTY
	W02	2
	W03	2
	W04	3
	W07	1
	W05	4
	W08	2
	W09	2
	S03 M8X60	4
	S04 M6X20	9
	S01 M6X10	92
	M01 M6	101
	Z01 Ø4X14	65
	B	8
	Z02 Ø4X14D	9
	Z03 Ø4X10	5
	Z05 Ø5X25	2
	W06	2

EXT. 2 Sections(PC/GLASS No.2)

	Y6	4
	Y7	2
	Y9	2
	Y10	2

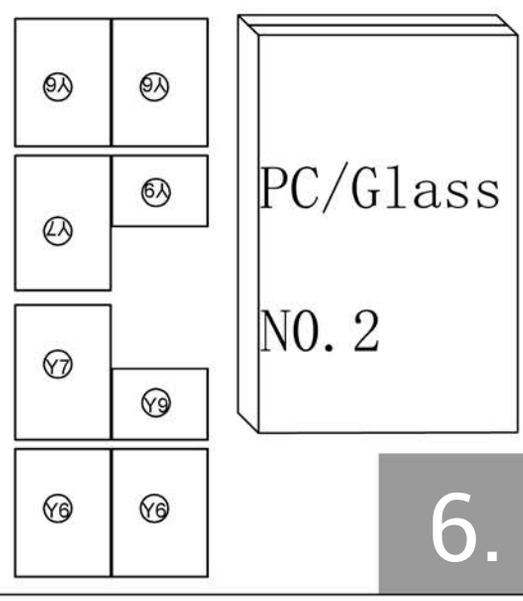

DEUREN

montage overzicht

PART	NO	QTY	PART	NO	QTY	PART	NO	QTY
	L14	1		C	4		Y11	2
	L16A	4		D	2			
	L16B	4		J03R/L	1/1			
	L17	1		S01 M6X10	3			
	L18A	2		M01 M6	3			
	L18D	2		S02 M8X30	2			
	L21C	4		M02 M8	2			
	L21D	4		Z01 Ø4X14	16			
				Z02 Ø4X14D	6			
				Z04 Ø4X40	4			

Frames

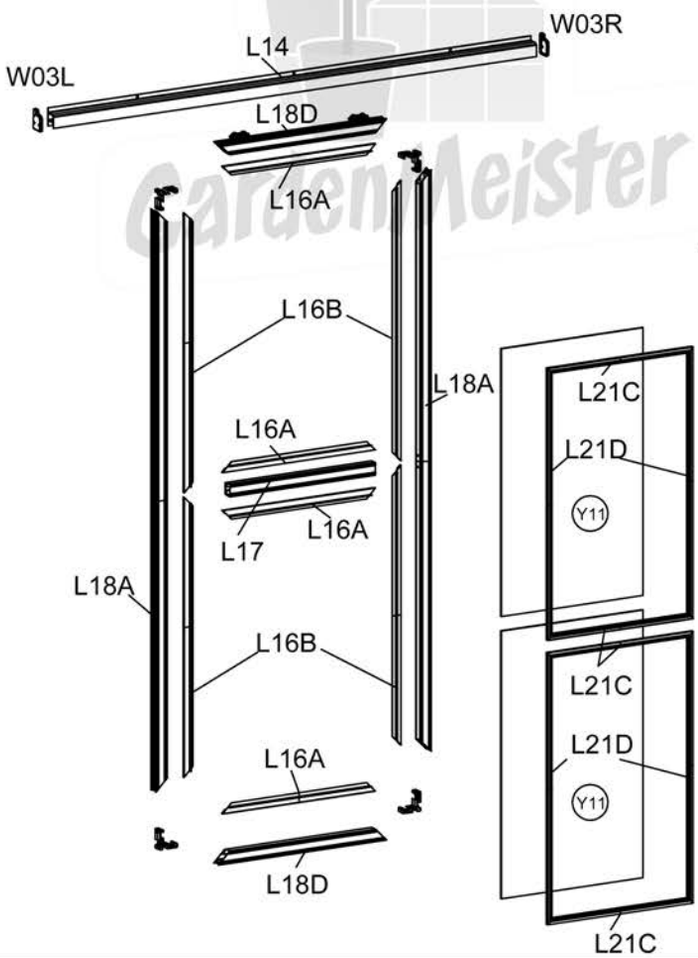

Aluminium Capping

VOORZIJDE

montage overzicht

PART	NO	QTY	PART	NO	QTY	PART	NO	QTY
	L01A	1		A	3		Y1	1
	L01B	1		J01	1		Y2	2
	L01C	1		J02R/L	1/1		Y4	1
	L01D	1		J04	2		Y5	1
	L03E	1		J05	2			
	L03F	1		J06	2			
	L04A	2		J07	2			
	L05A	2		J08	2			
	L10	1		W01	3			
	L11A	4		W05	2			
	L11B	4		S03 M8X60	2			
	L11D	2		S01 M6X10	28			
	L11E	1		M01 M6	28			
	L12C	1		Z01 Ø4X14	46			
	L12D	1		Z02 Ø4X14D	6			
	L12G	2						
	L23	1						

Aluminium Capping

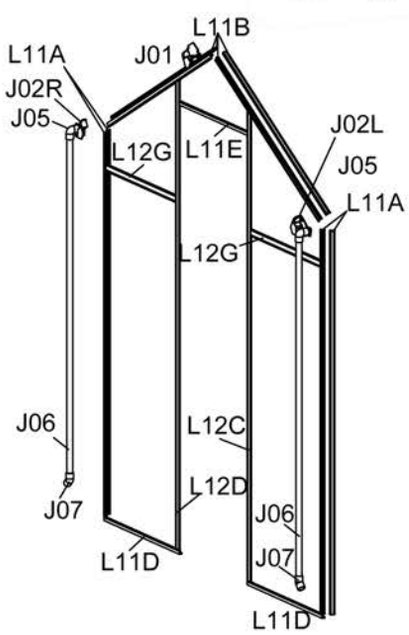

Panels

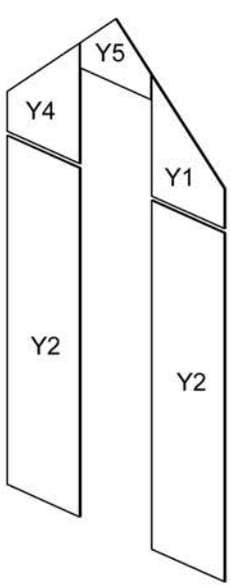

Frames

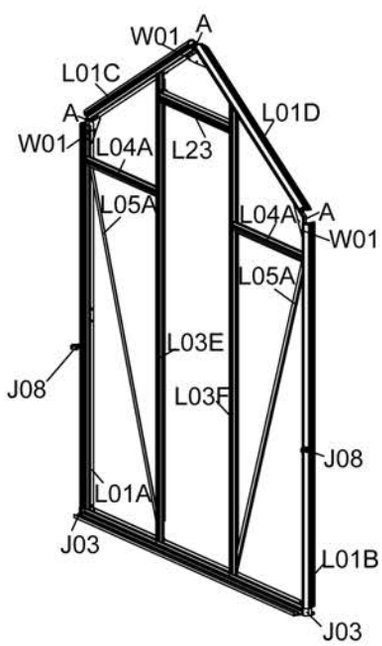

ACHTERZIJDE

montage overzicht

PART	NO	QTY
	L01A	1
	L01B	1
	L01C	1
	L01D	1
	L03C	1
	L03D	1
	L04A	3
	L05A	2
	L05B	1
	L08B	1
	L11A	4
	L11B	4
	L11C	3
	L12C	1
	L12D	1
	L12G	3
	L13	1

PART	NO	QTY
	A	3
	J01	1
	J02R/L	1/1
	J04	2
	J05	2
	J06	2
	J07	2
	J08	2
	W01	3
	W05	3
	S03 M8X60	3
	S01 M6X10	30
	M01 M6	30
	Z01 Ø4X14	48
	Z02 Ø4X14D	6

PART	NO	QTY
	Y1	1
	Y2	3
	Y4	1
	Y3	1

GardenMeister

Aluminium Capping

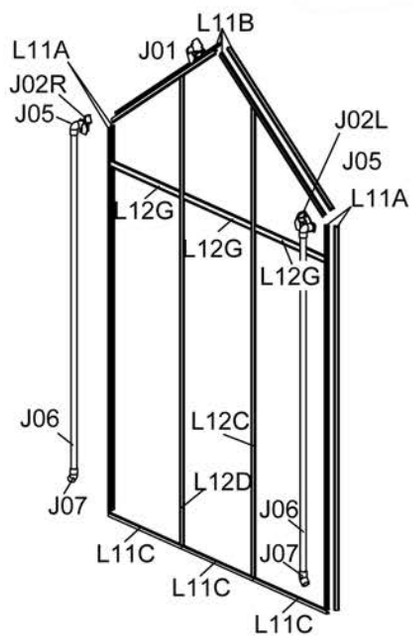

Panels

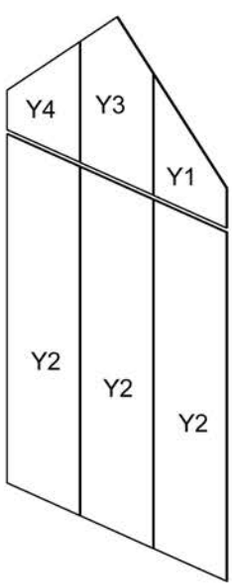

Frames

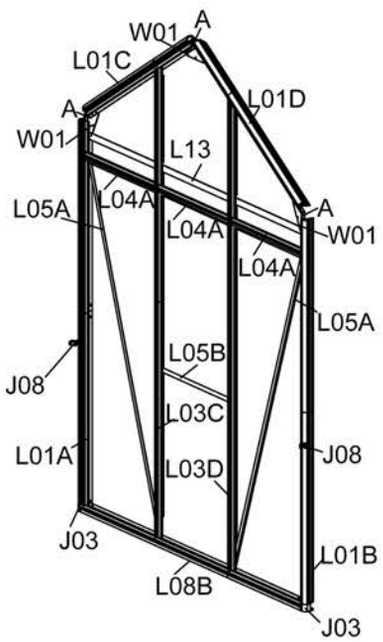

ZIJWANDEN EN DAK

montage overzicht

PART	NO	QTY	PART	NO	QTY
	L06A	1		Y6	6
	L07A	2		Y7	4
	L08B	2		Y9	2
	L09A	2			
	L02A	4			
	L02B	4			
	L04A	2			
	L05C	6			
	L05D	4			
	L22	6			
	L22B	2			
	L11C	6			
	L12A	4			
	L12B	4			
	L12G	2			
	L15A	2			
	L19A	4			
	L19B	2			
	L20	2			
	L21A	4			
	L21B	4			
	B	8			
	W05	6			
	W08	2			
	W09	2			
	S03 M8X60	6			
	S04 M6X20	4			
	S01 M6X10	68			
	M01 M6	72			
	Z01 Ø4X14	68			
	Z02 Ø4X14D	8			
	Z03 Ø4X10	4			

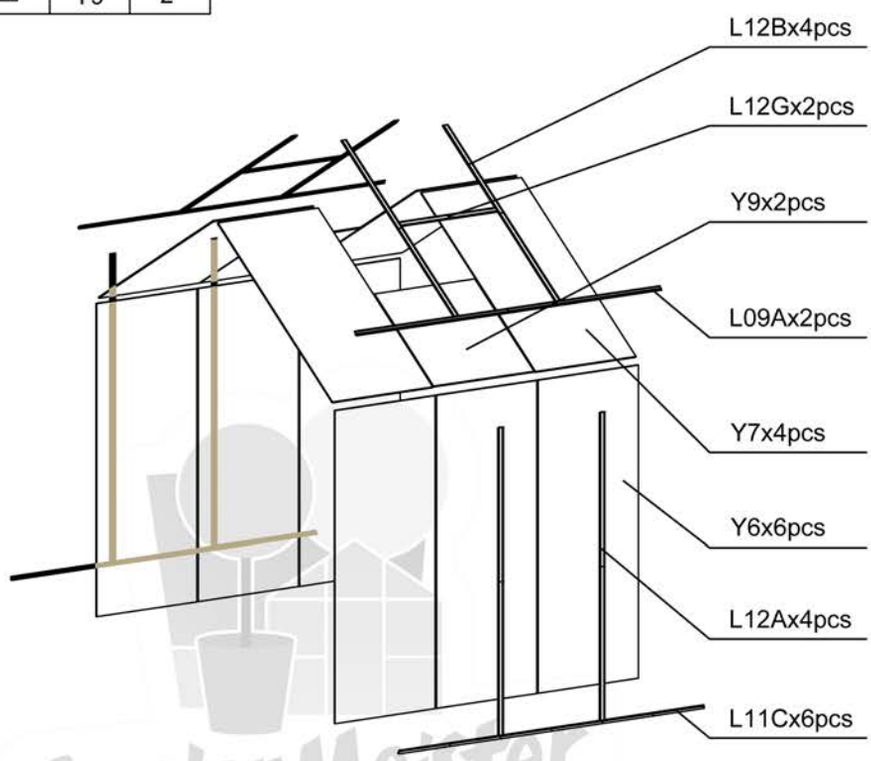

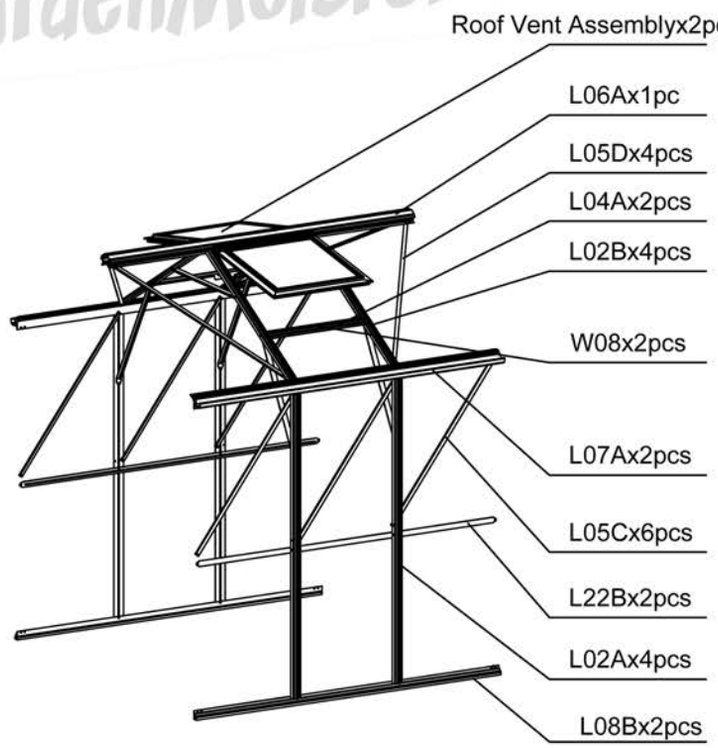

2 EXTENSIES

montage overzicht

PART	NO	QTY	PART	NO	QTY	PART	NO	QTY
	L06	1		B	8		Y6	4
	L07	2		W02	2		Y7	2
	L08A	2		W03	2		Y9	2
	L09	2		W04	3		Y10	2
	L02A	2		W05	4			
	L02B	2		W06	2			
	L04A	2		W07	1			
	L05C	4		W08	2			
	L05D	2		W09	2			
	L22	3		S01 M6X10	92			
	L22A	2		M01 M6	100			
	L22C	6		S03 M8X60	4			
	L11C	4		S04 M6X20	8			
	L12A	4		Z01 Ø4X14	62			
	L12B	4		Z02 Ø4X14D	8			
	L12G	2		Z03 Ø4X10	4			
	L03A	2		Z05 Ø5X25Z	2			
	L03B	2						
	L15A	2						
	L19A	4						
	L19B	2						
	L20	2						
	L21A	4						
	L21B	4						
	L27	1						

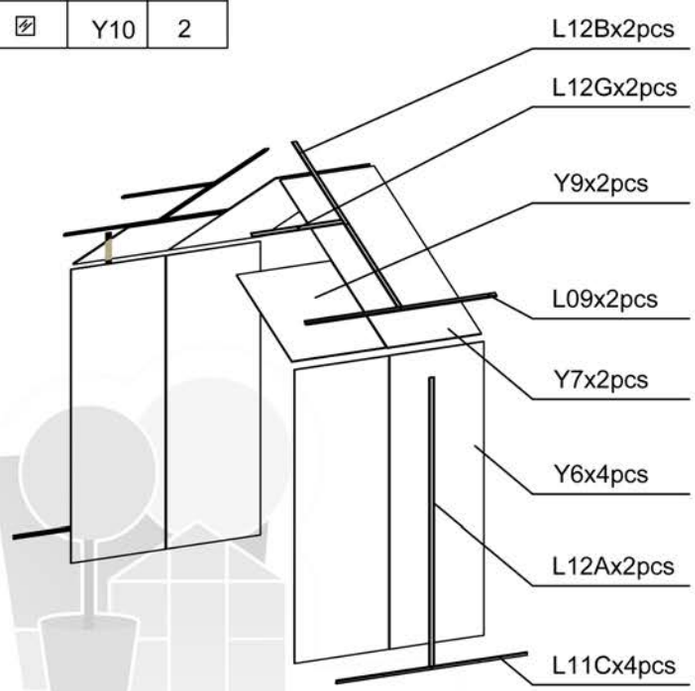

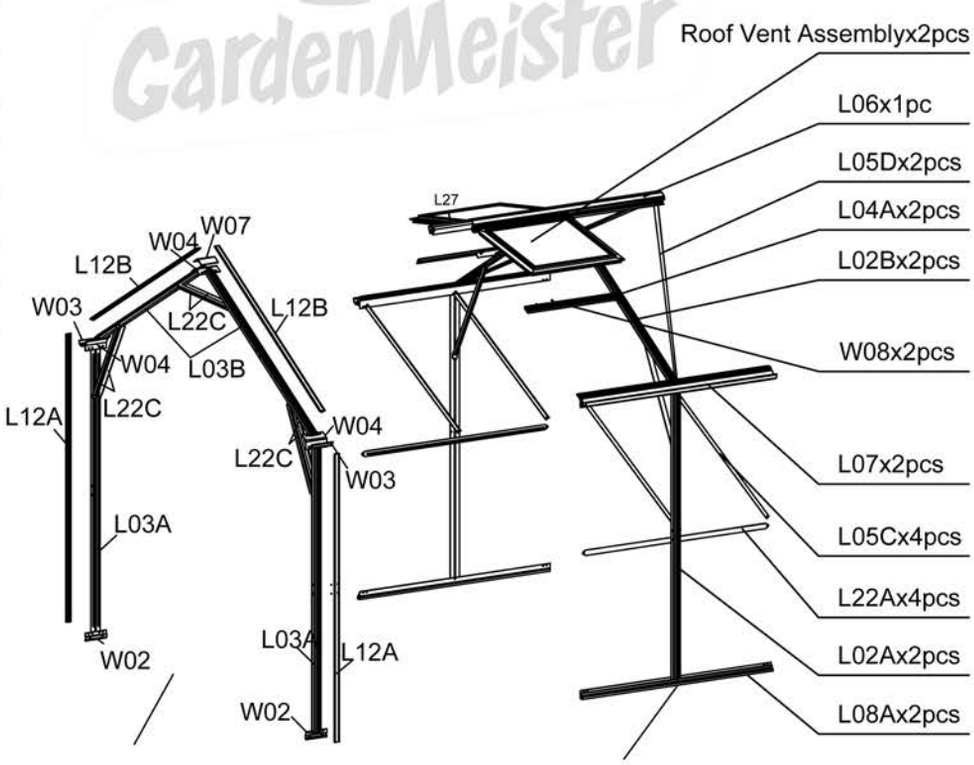

Middle Section Assembly Instruction connects greenhouse to extension.

\+

EXT. 2 Sections

DAKRAAM

montage overzicht

PART	NO	QTY	PART	NO	QTY	PART	NO	QTY
	L15A	1		B	4		Y10	1
	L19A	2		Z01 Ø4X14	8			
	L19B	1		Z02 Ø4X14D	4			
	L20	1		Z03 Ø4X10	2			
	L21A	2						
	L21B	2						
	W06	1						

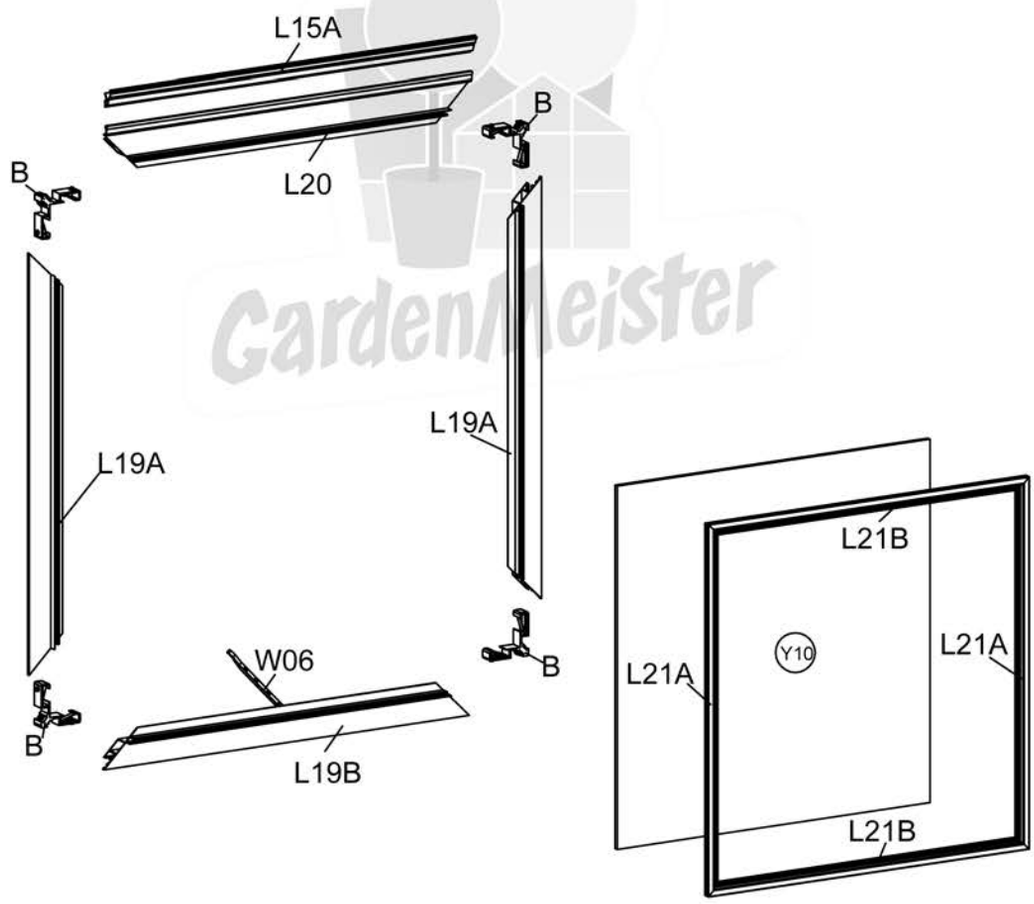

DAKRAAM

montage

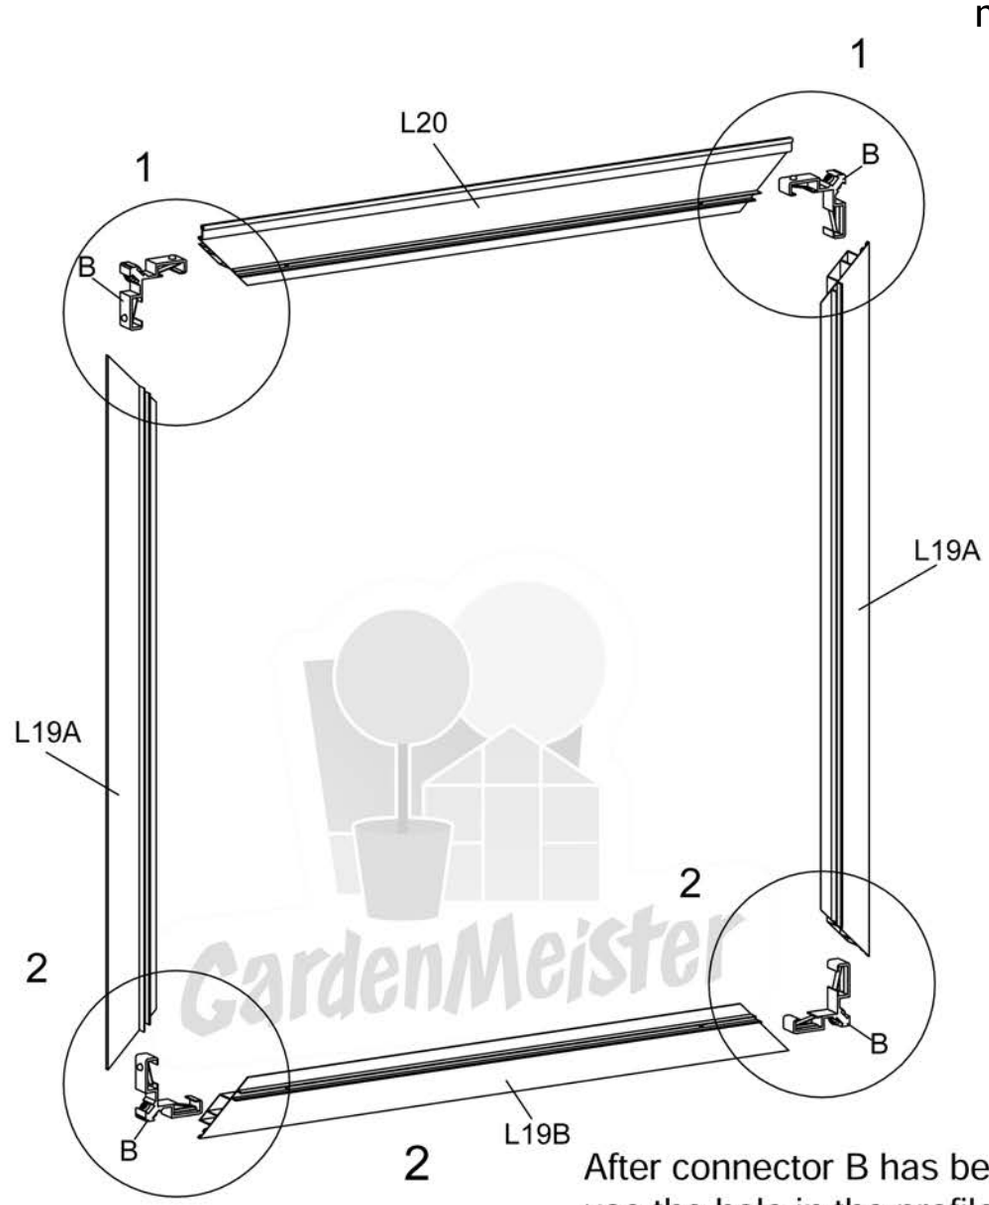

After connector B has been fitted, use the hole in the profile to tighten the connector in place.

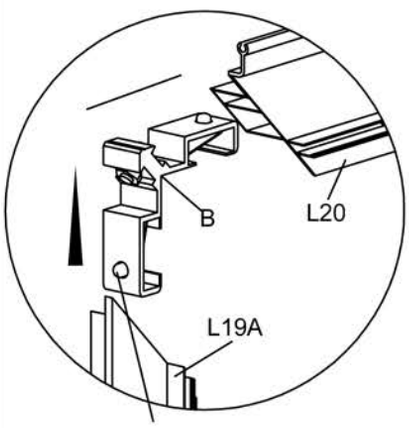

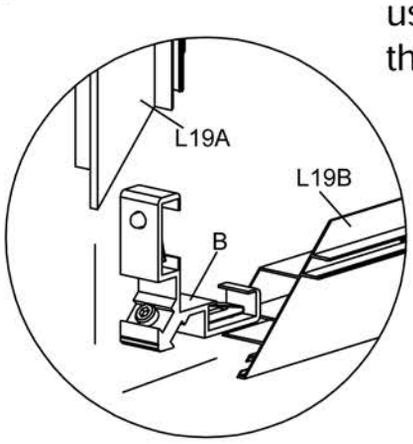

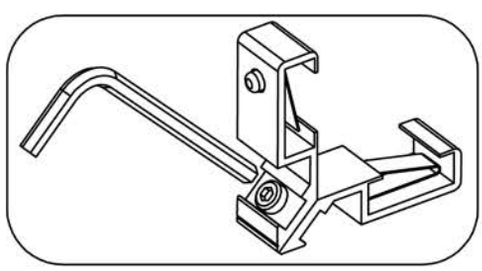

Push down the button on connector B before inserting it into the end of the frame profile.

DAKRAAM

montage

NL

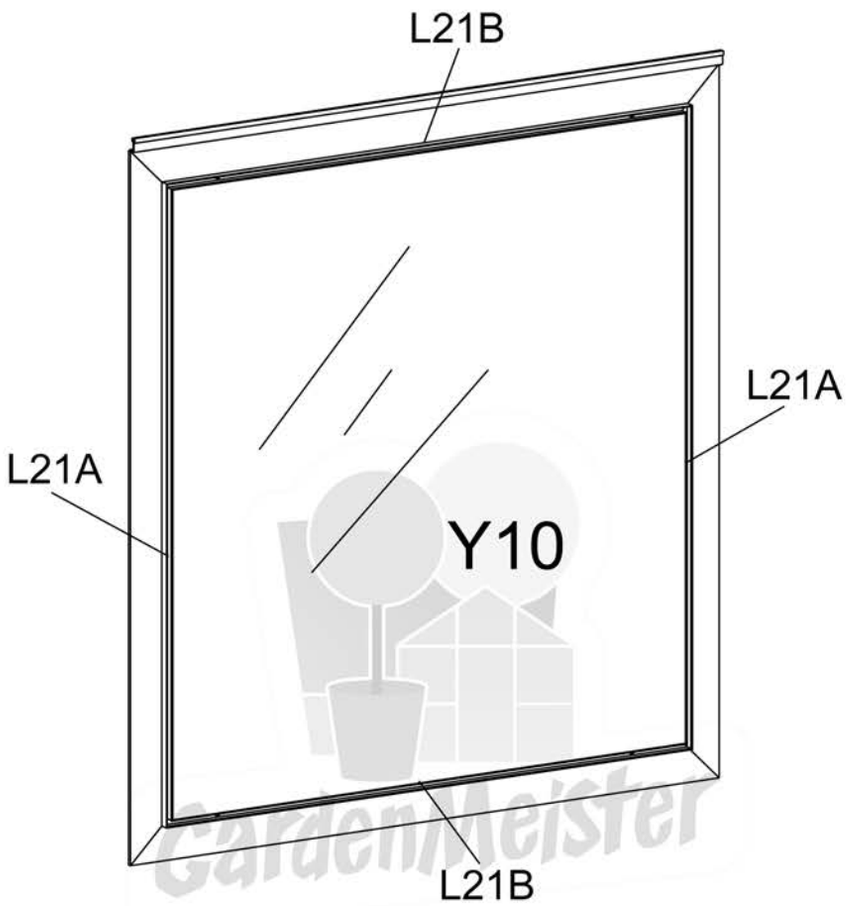

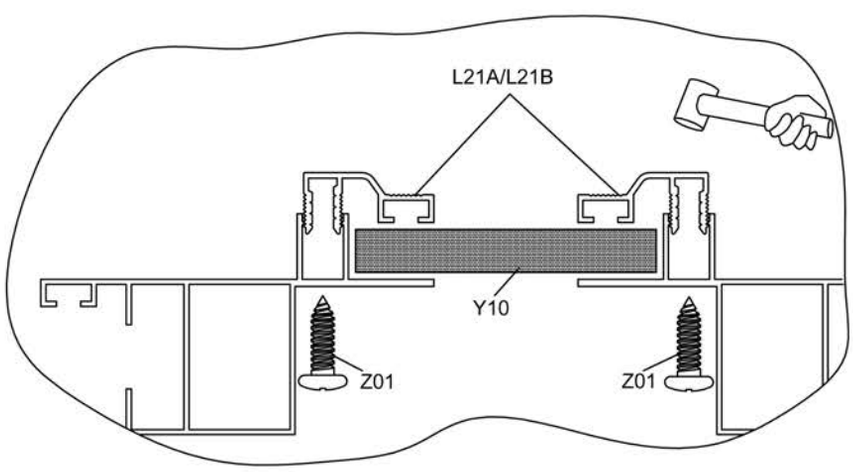

First the glazing panel Y10 should be loosely retained by the bar capping profiles L21A and L21B. Next tap the bar capping gently into position with a rubber mallet, then fix the bar capping securely with Z01 screws.

DAKRAAM

montage

Install the Z02 screws to prevent the L15A from sliding off the vent.

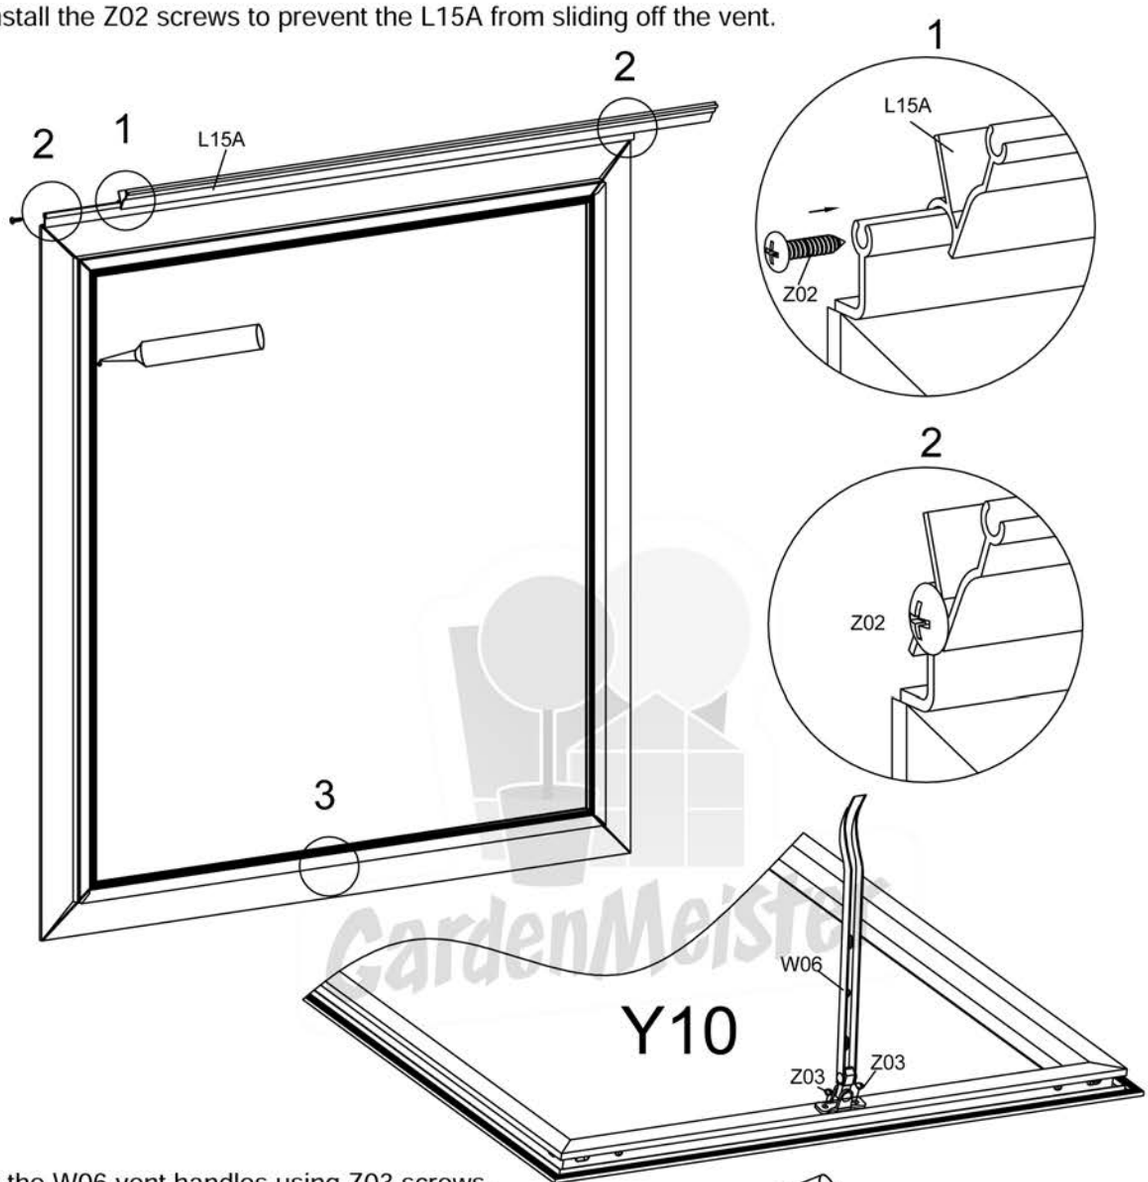

Fix the W06 vent handles using Z03 screws.
If required, automatic vent openers can be installed once the greenhouse is complete.

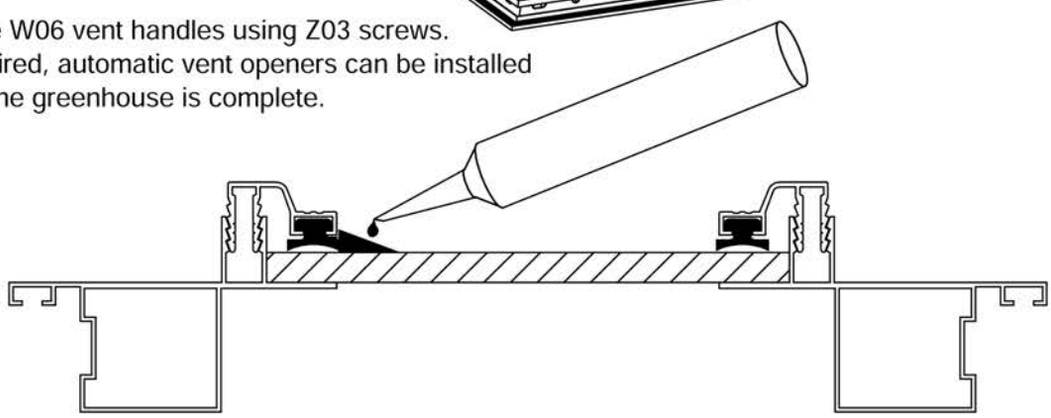

Fill silicone sealant all around Y10 and the gaps between the aluminium frames to avoid any water leaking

DEUR

montage

PART	NO	QTY	PART	NO	QTY	PART	NO	QTY
	L14	1		C	4		Y11	2
	L16A	4		D	2			
	L16B	4		J03R/L	1/1			
	L17	1		S01 M6X10	3			
	L18A	2		M01 M6	3			
	L18D	2		S02 M8X30	2			
	L21C	4		M02 M8	2			
	L21D	4		Z01 Ø4X14	16			
				Z02 Ø4X14D	6			
				Z04 Ø4X40	4			

Frames

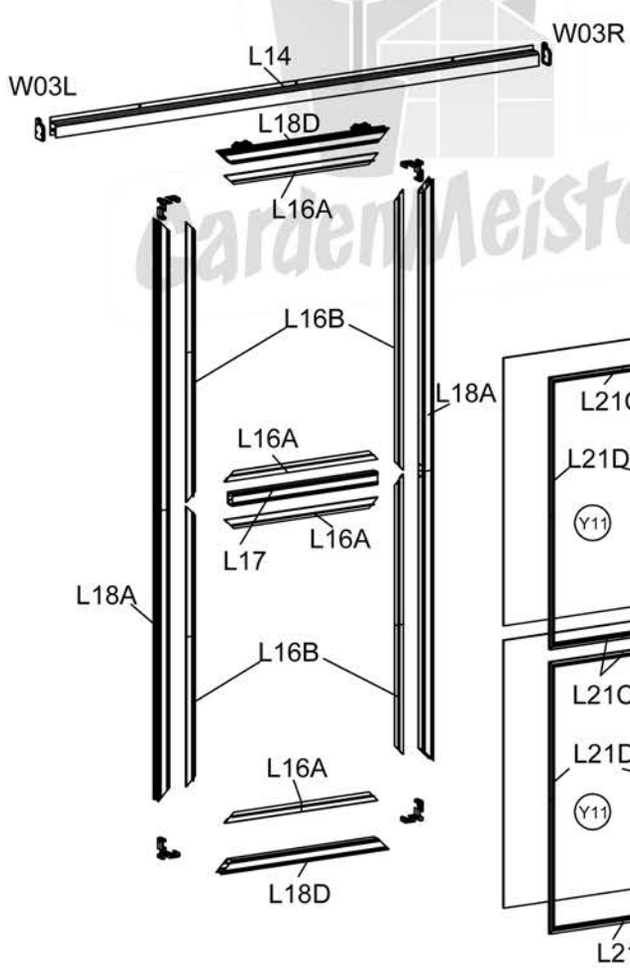

Aluminium Capping

DEUR

montage

Slide L16A into L17A and L18D and slide L16B into L18A and L18B, then assemble the door frames using connector C, as shown in the sketches below.

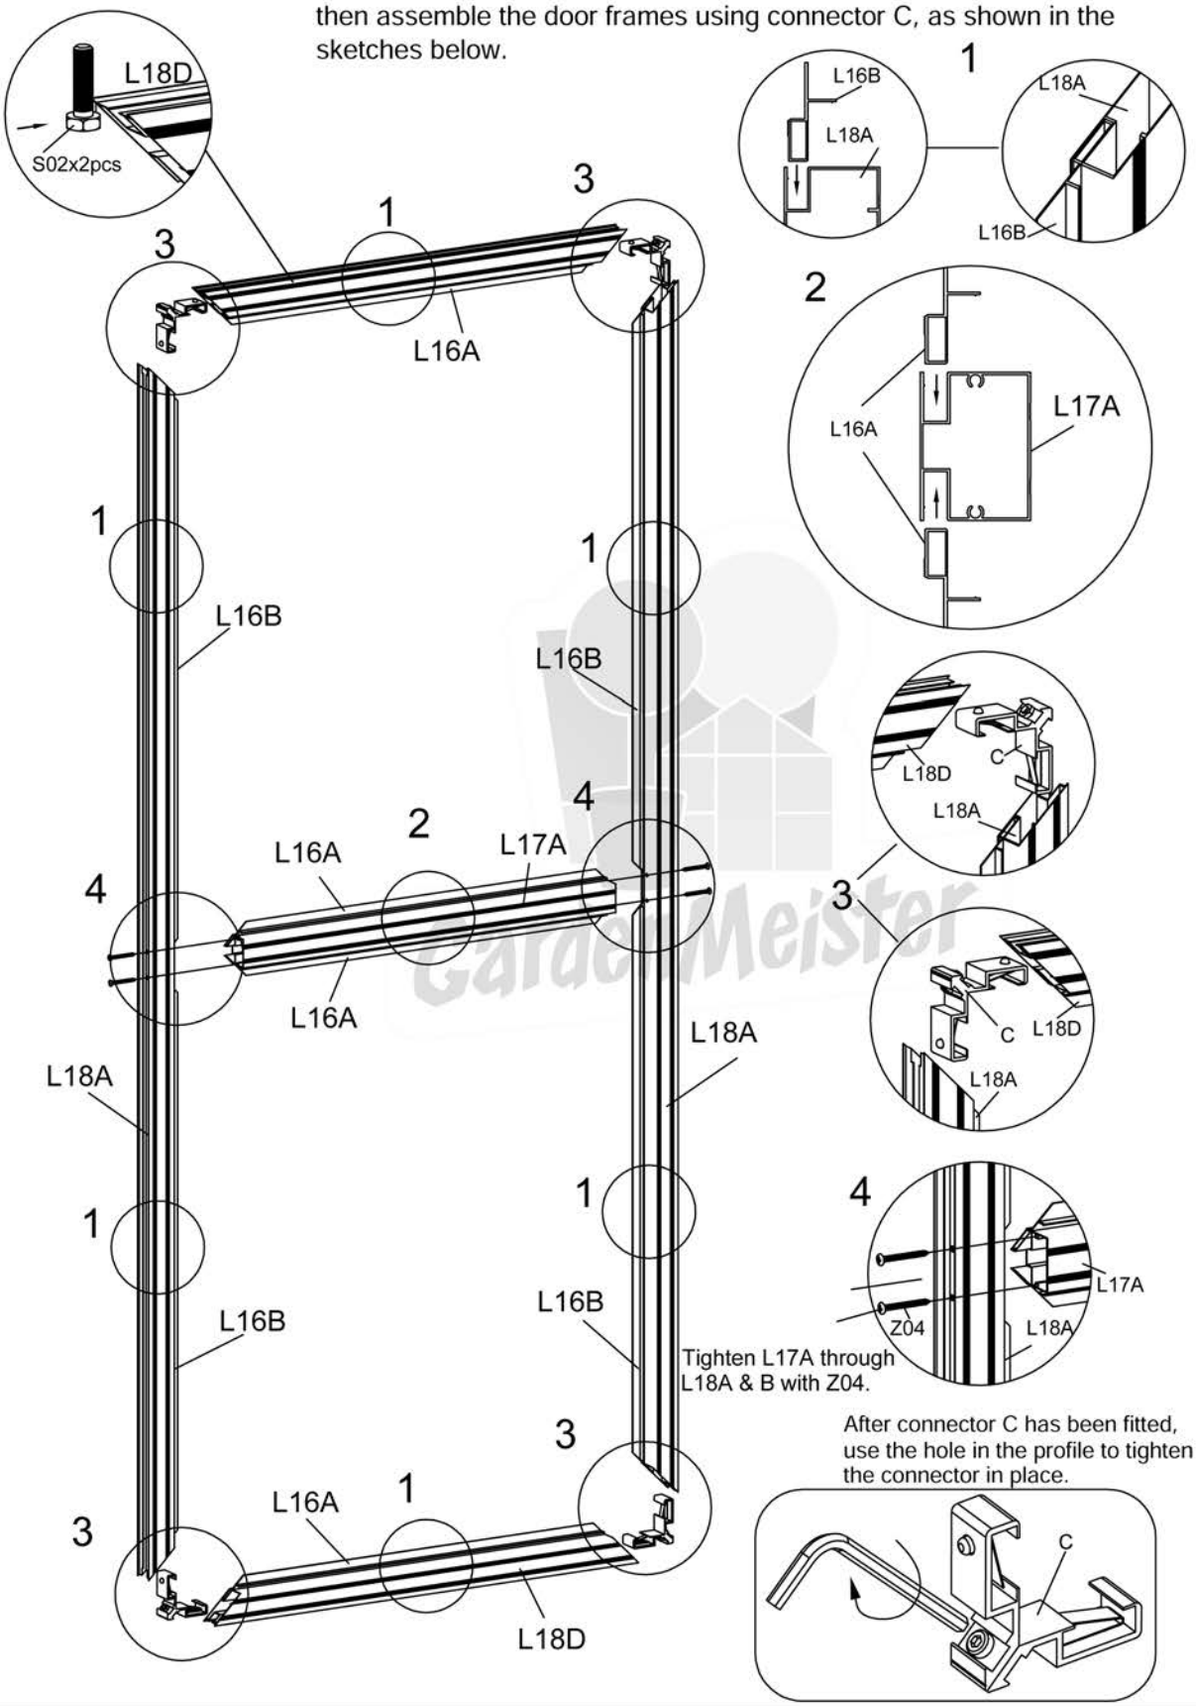

DEUR
montage

First the glazing panels
should be loosely retained by the bar
capping profiles L21C and L21D.
Next tap the bar capping gently into
position with a rubber mallet, then fix
the bar capping securely with Z01 screws.

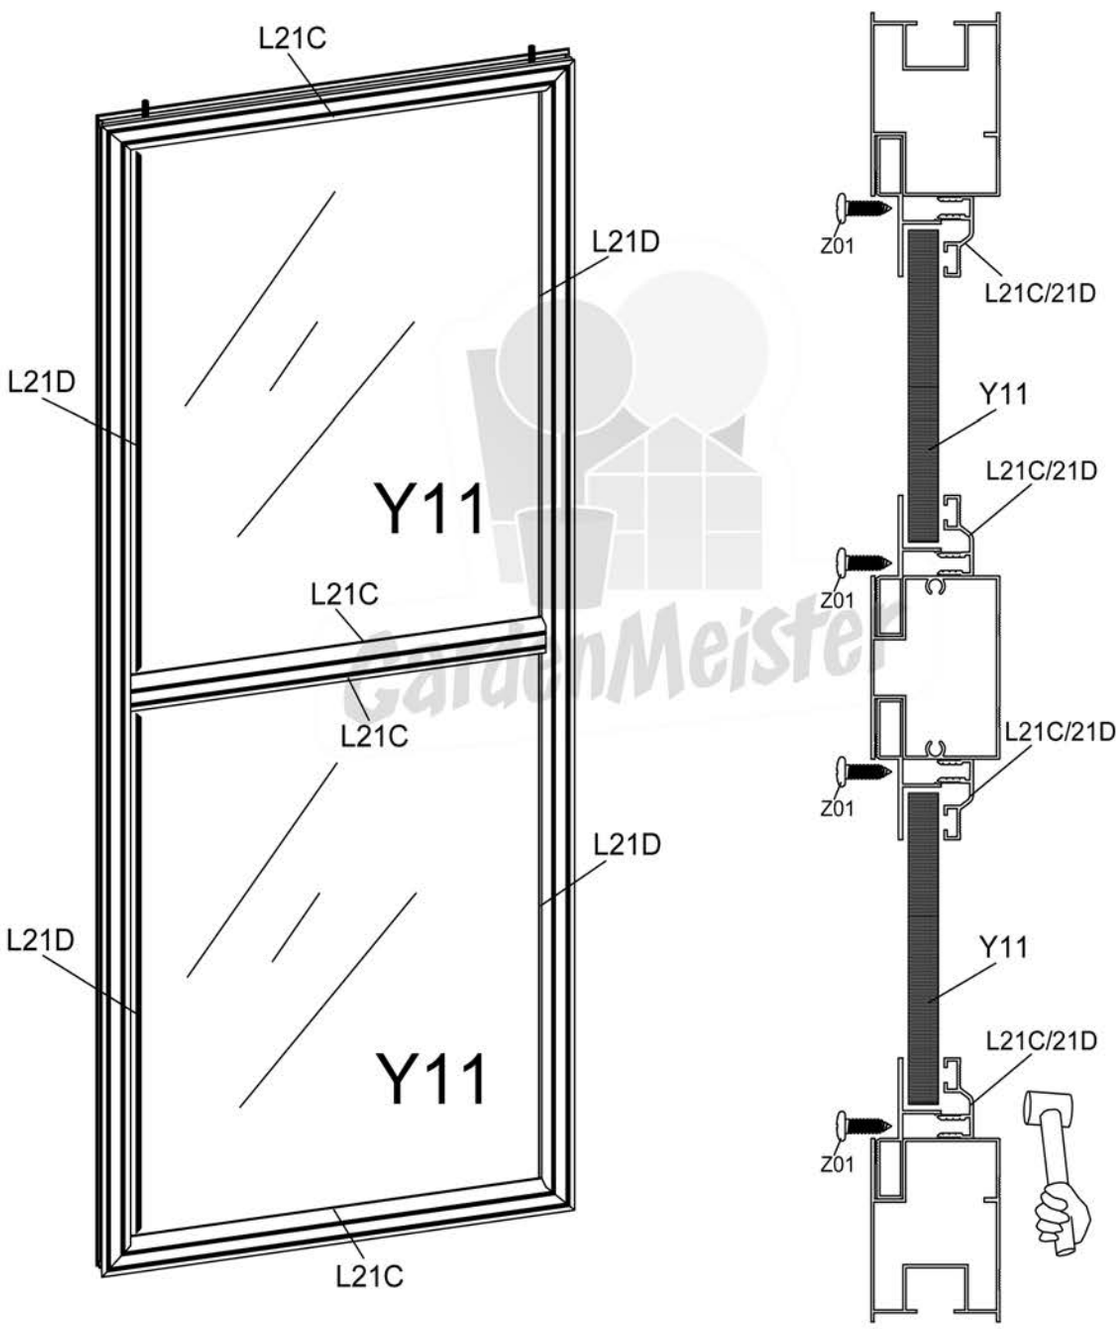

DEUR
montage

Slide 2xS02 into L18D, positioned 100mm away from each edge.
Secure S02 using M02 bolts, then rotate the wheels
to ensure free movement.

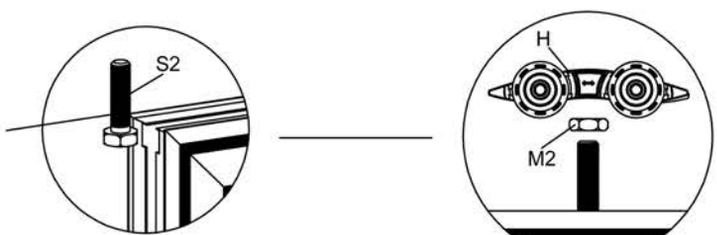

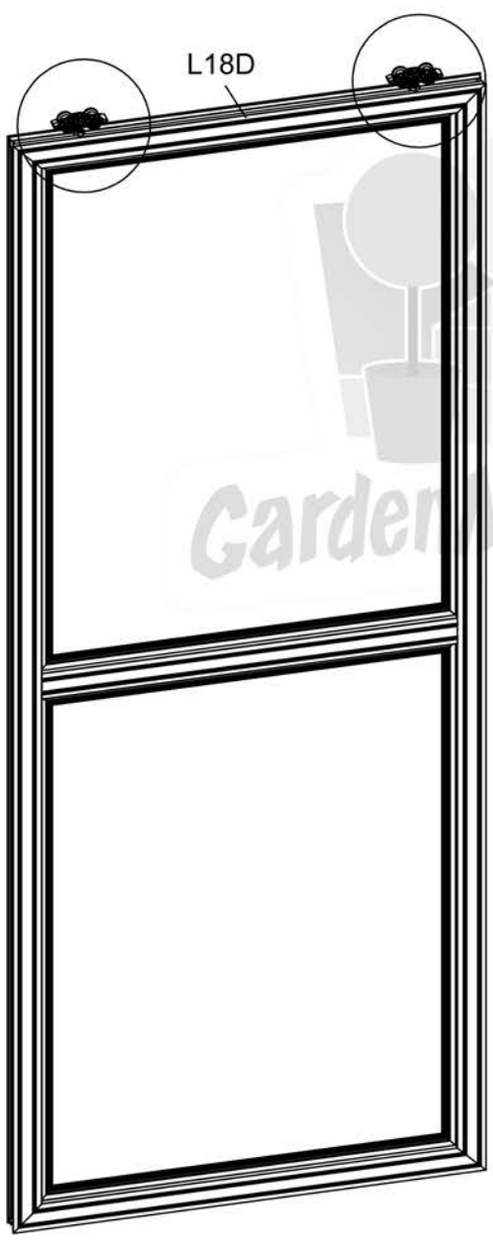

* This is the method of adjusting the door height.

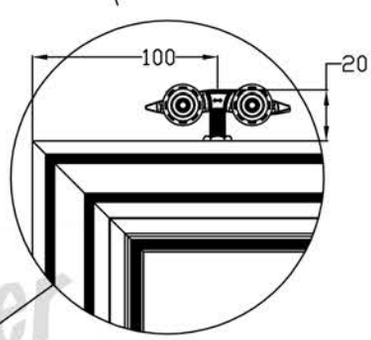

After Assembly

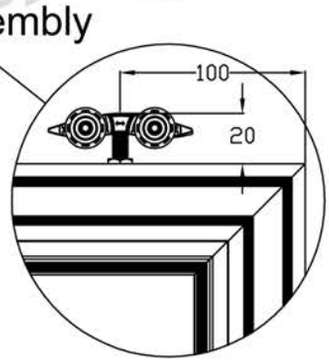

FUNDERING

montage

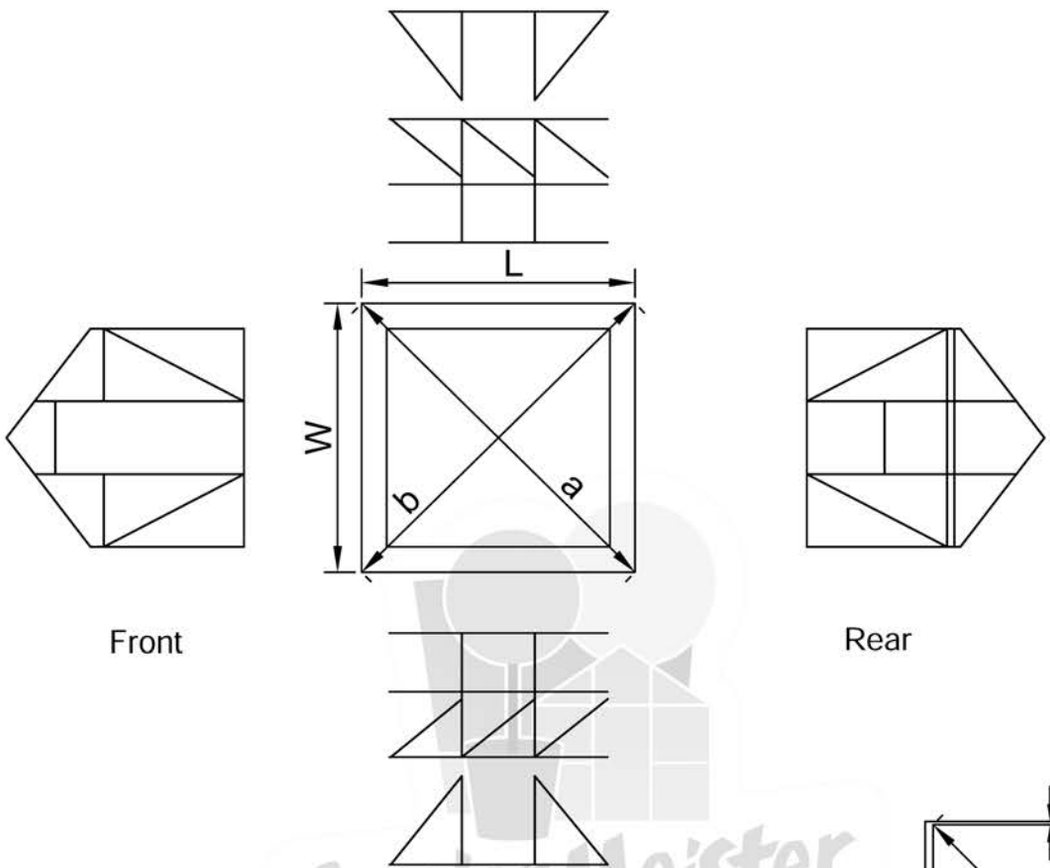

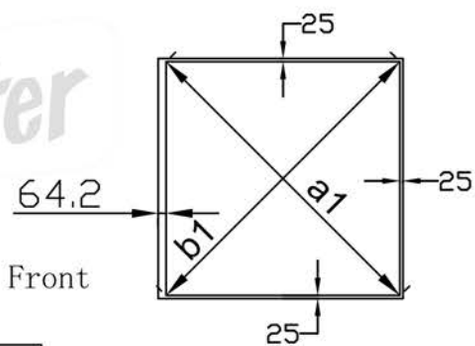

	GM34303	GM34305	GM34307	GM34309	GM34311	etc.
W (mm)	1910.7	1910.7	1910.7	1910.7	1910.7	
L (mm)	1949.9	3184.9	4419.9	5654.9	6889.9	
a=b (mm)	2730	3714.1	4815.2	5969	7149.9	
a1=b1 (mm)	2642	3598	4670	5794.1	6944.9	

* W= Outer Width of Base Profiles
* L= Outer Length of Base Profiles
* a=b= Outer Diagonal of Base Profiles
* a1=b1= Inner Diagonal of Base Profiles

FUNDERING

montage

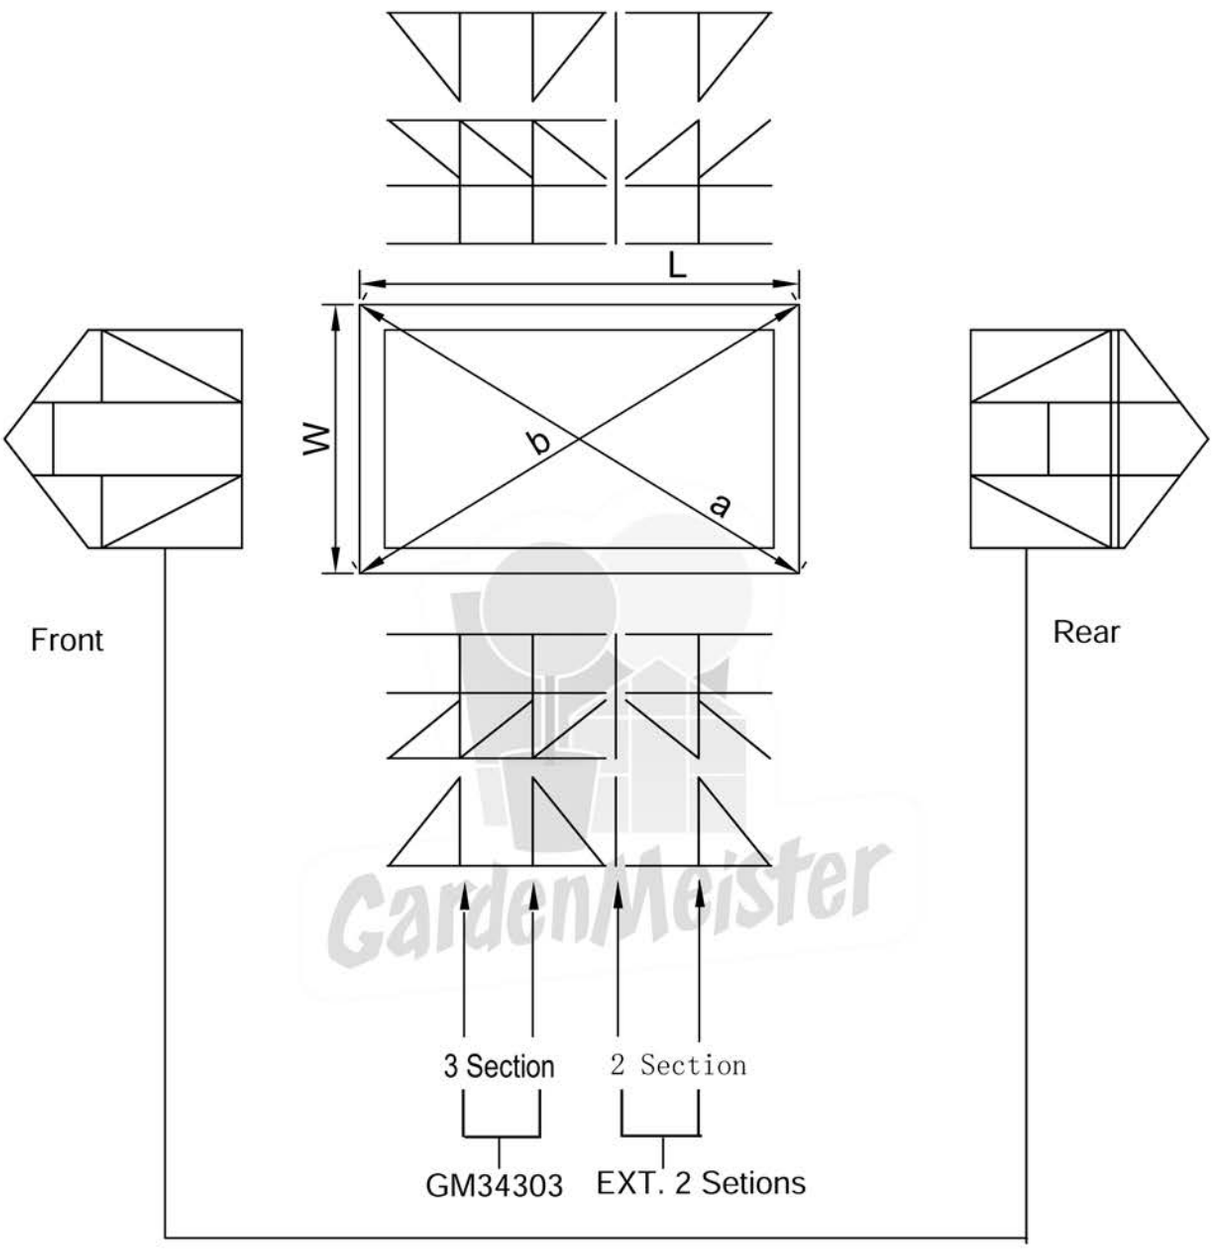

GM34305

* The basic model,GM34303,can be easily extended by adding ' 2 Section Assembly' each time for a longer size.

FRAME
montage

ATTENTIE:

De volgende stappen zyn bedoeld wanneer u een tuįnkas heeft gekocht met uitbreiding extensies. Wanneer u de basıs tuınkas heeft, heeft u één L08C, zonder L08A. Wanneer uw tuınkas meer dan één extentįe heeft, heeft u meer W02 platen voor de L08C en A's.

L08C

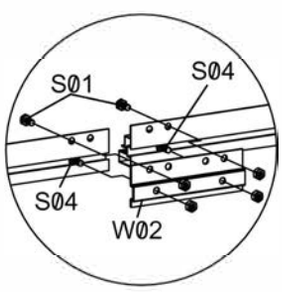

Monteer L08A & C door W02, maak hem vervolgens vast met bouten en moeren.

Leg alles onderdelen op de goede plek zoals onder afgebeeld.

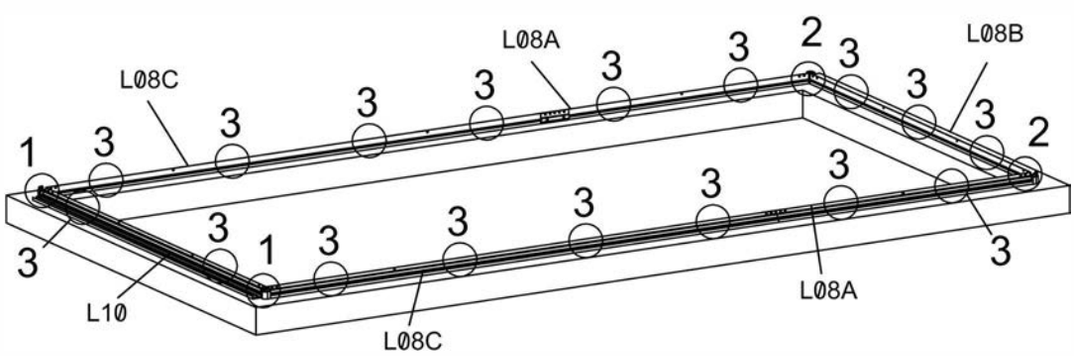

* Zorg ervoor dat het L10 deur profiel plat en gelıjk ıs.

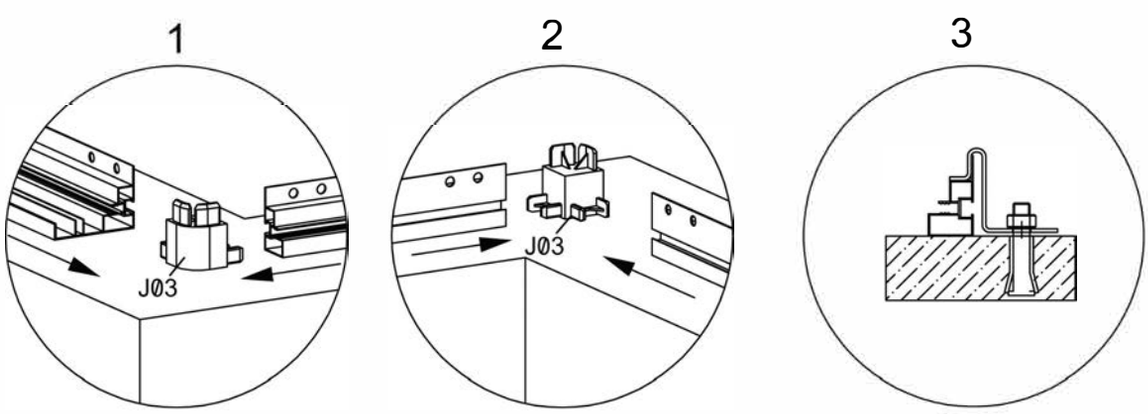

FRAME
montage

Installeer de hoek posten zoals getoond en zet ze vast met bouten en moeren.

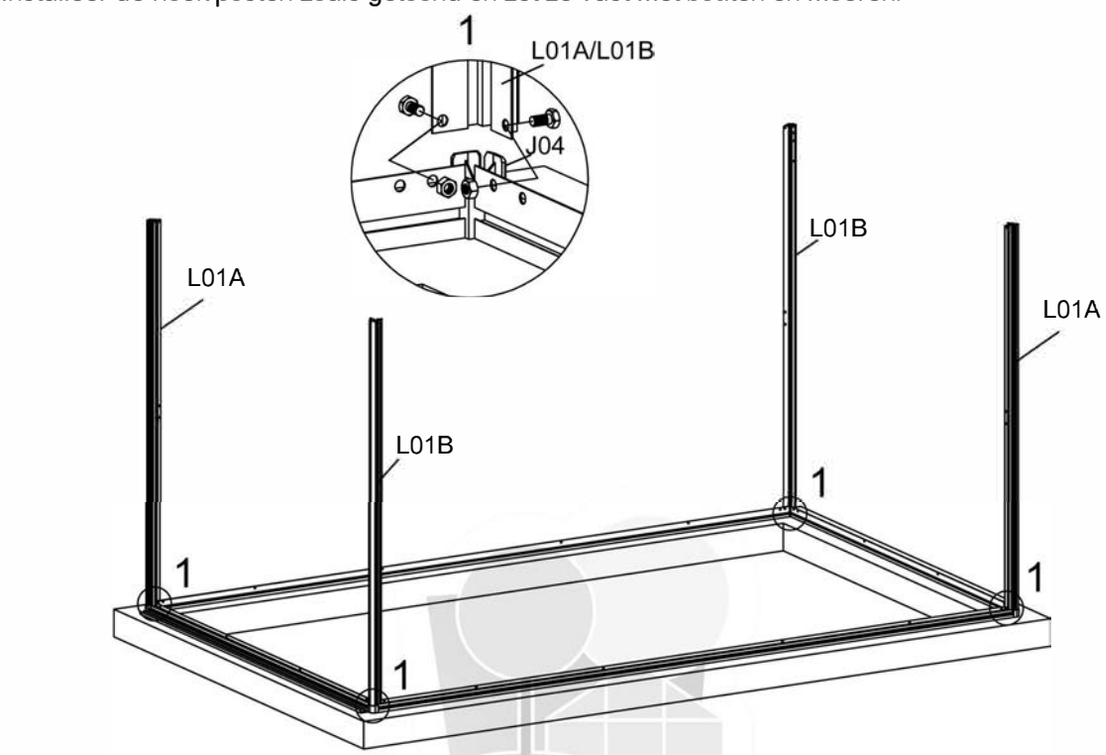

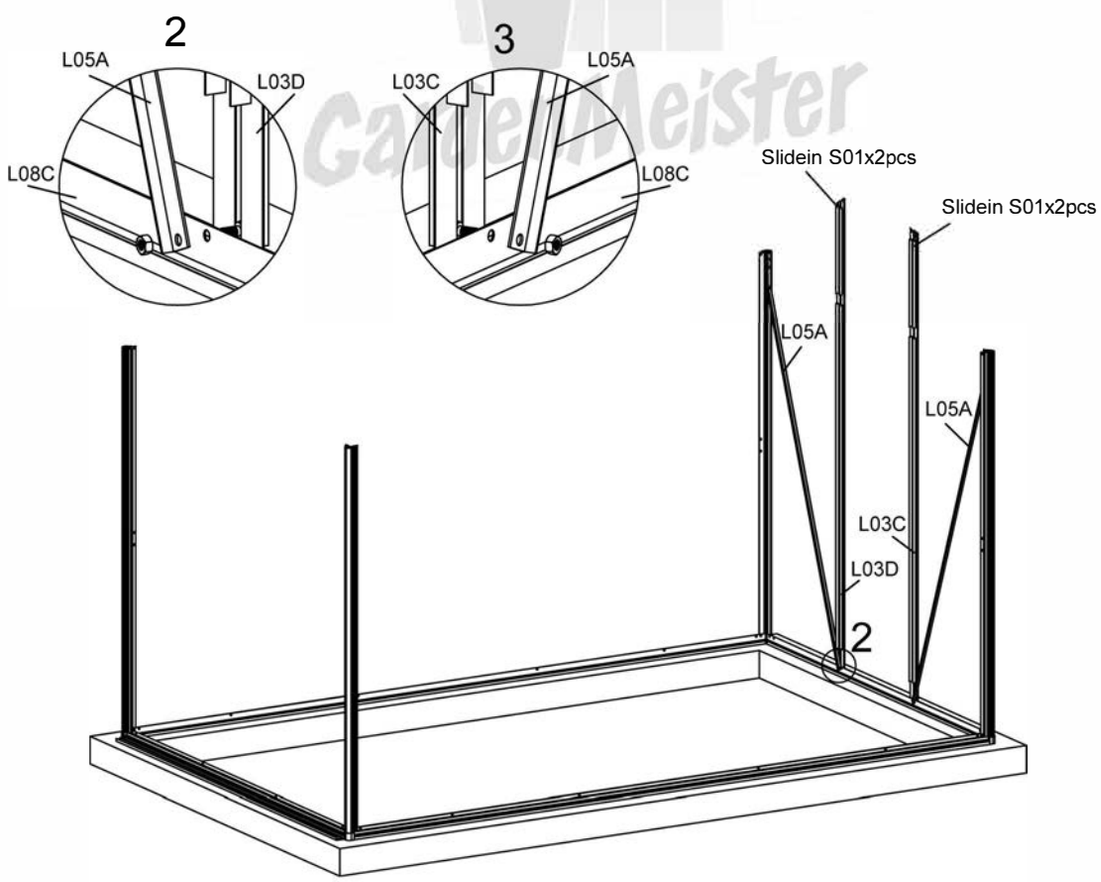

FRAME

montage

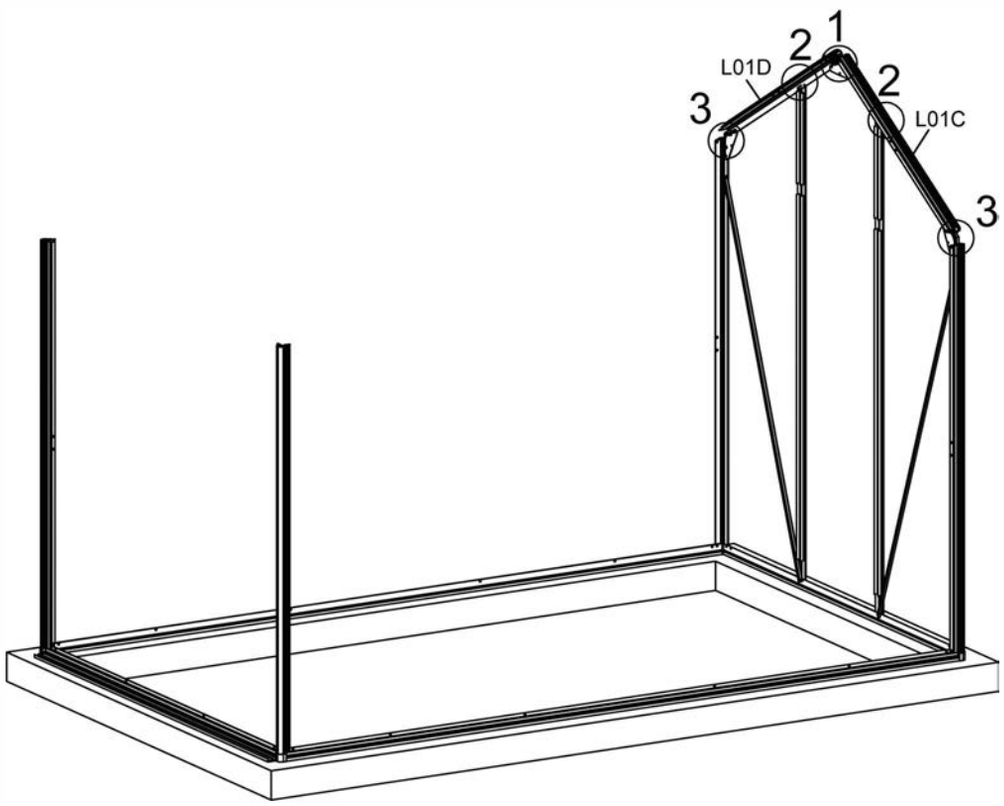

Installeer L01C en L01D met behulp van A en onderdeel W01, zet ze daarna vast met bouten en moeren.

1

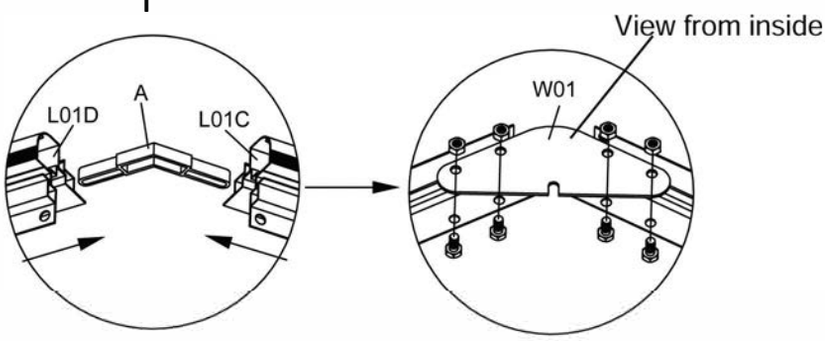

2

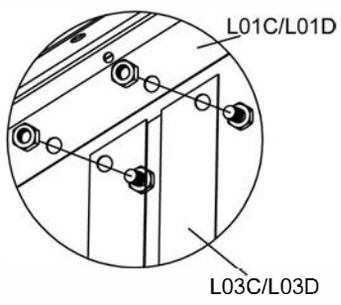

Koppel L01B met L01D en L01A met L01C met behulp van A en onderdeel W01, zet ze daarna vast met bouten en moeren.

3

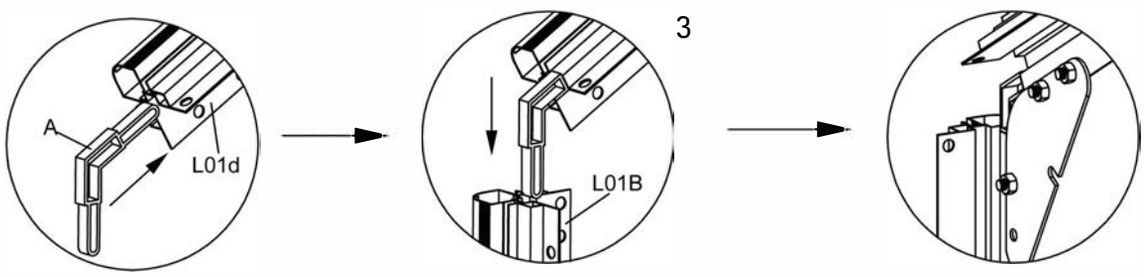

FRAME
montage

Install L13 horizontal braces in the rear wall.
Then install L04A & L05B with the nuts & bolts provided.
Remember to bolt the L05B brace in place when installing L04A.

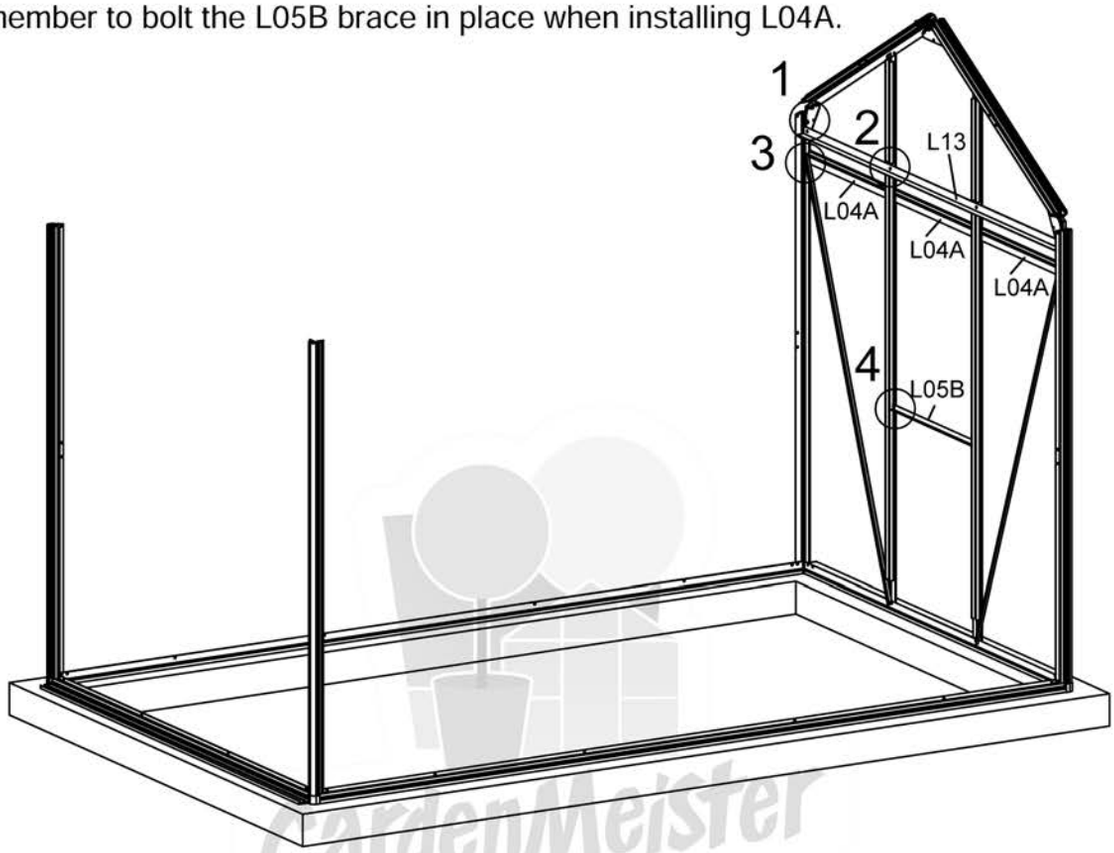

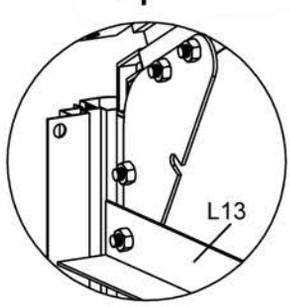

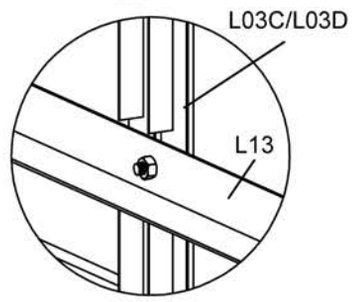

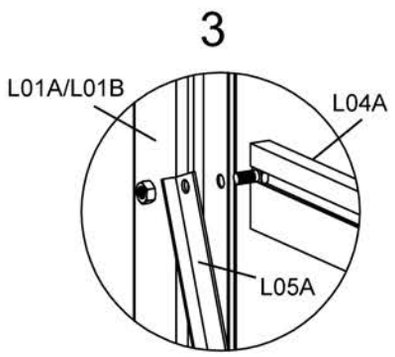

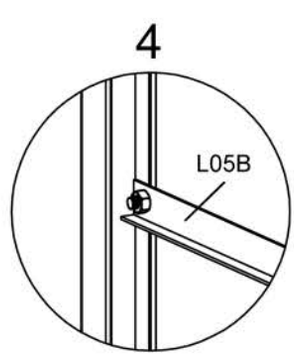

FRAME
montage

Install the door framing and bracing.

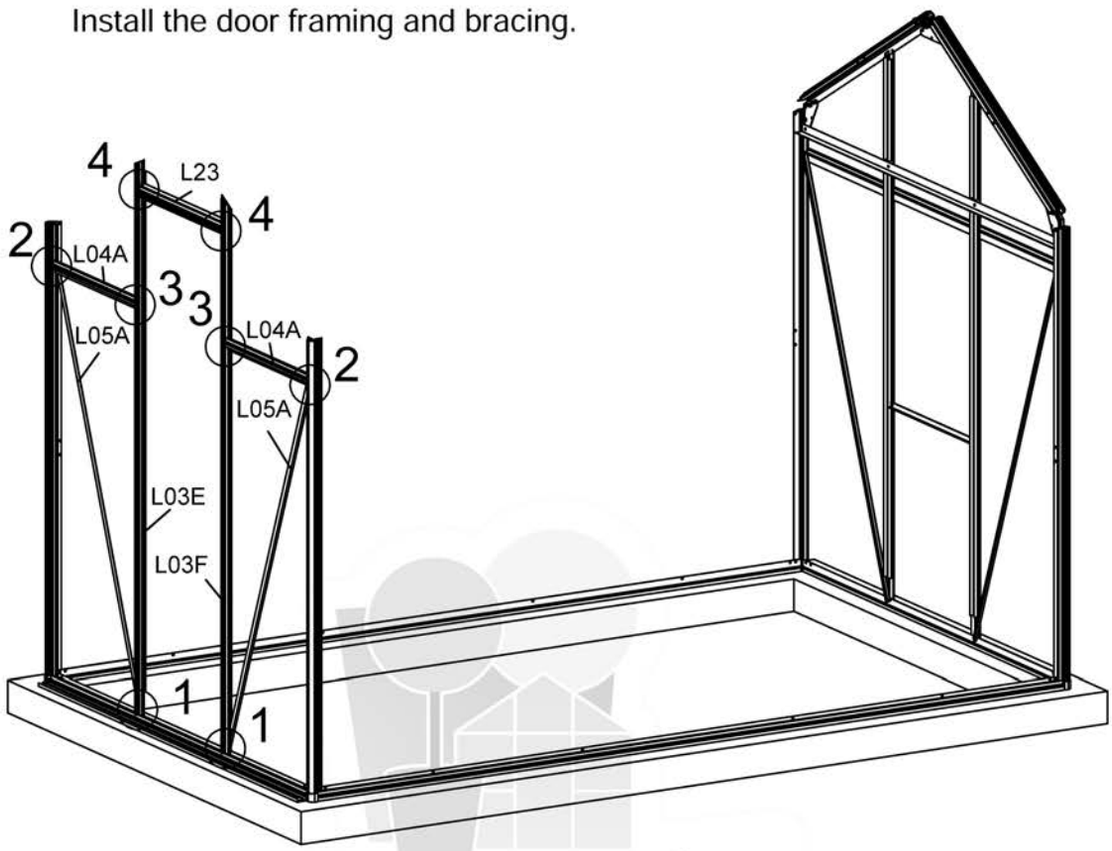

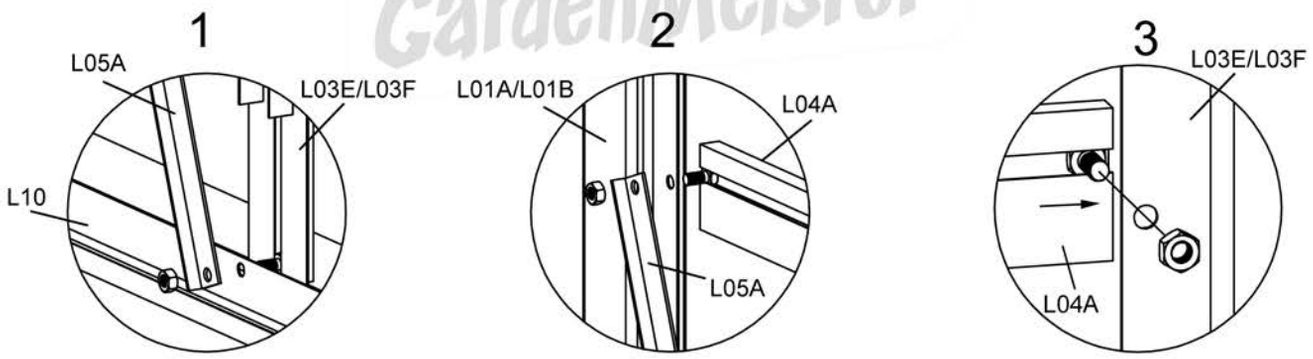

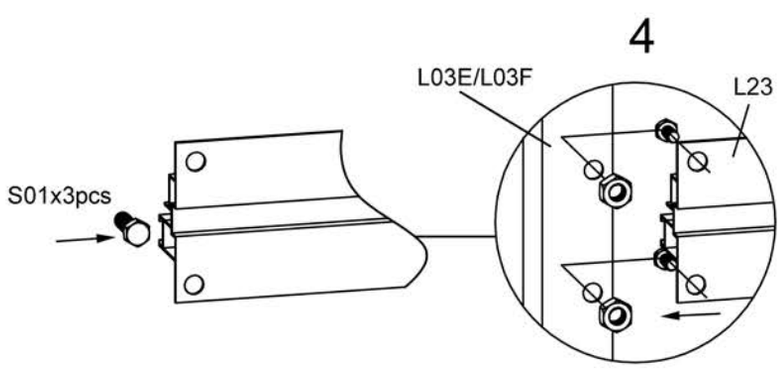

FRAME
montage

* During construction please ensure you temporarily support the front and rear wall framing until the structure is complete.

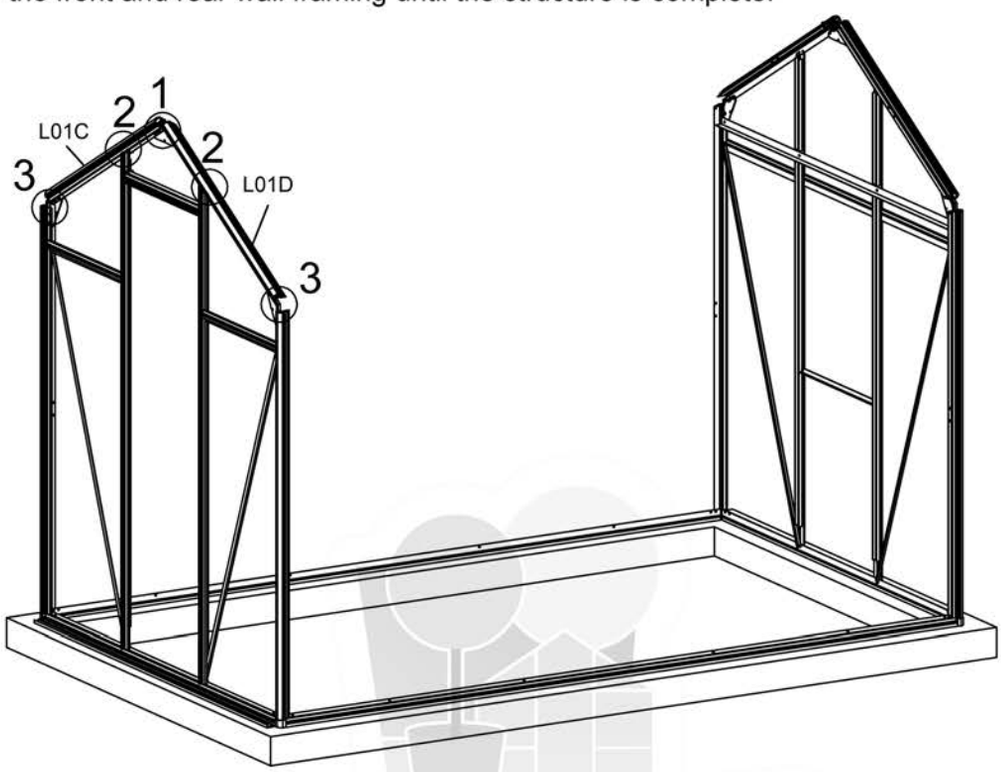

Install L01C and L01D using connector A and part W01, then tighten them with the nuts and bolts provided.

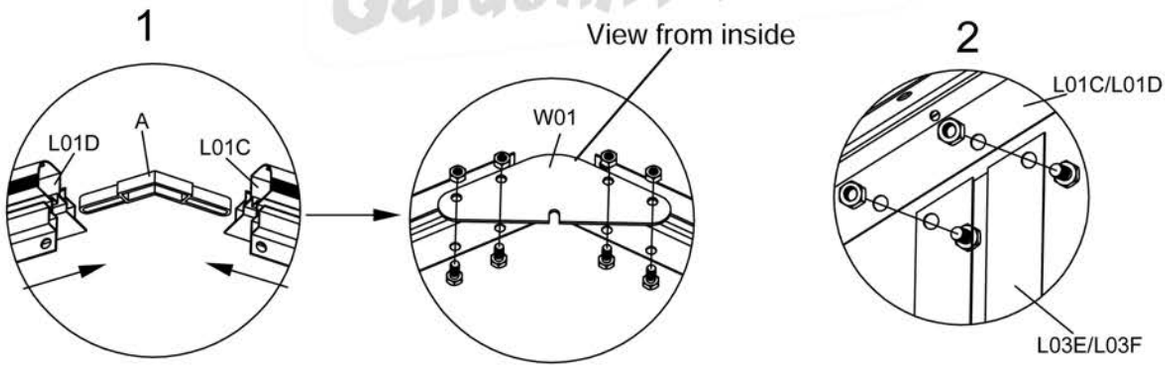

3 Connect L01B to L01D and L01A to L01C using connector A and part W01, then tighten them with the nuts and bolts provided.

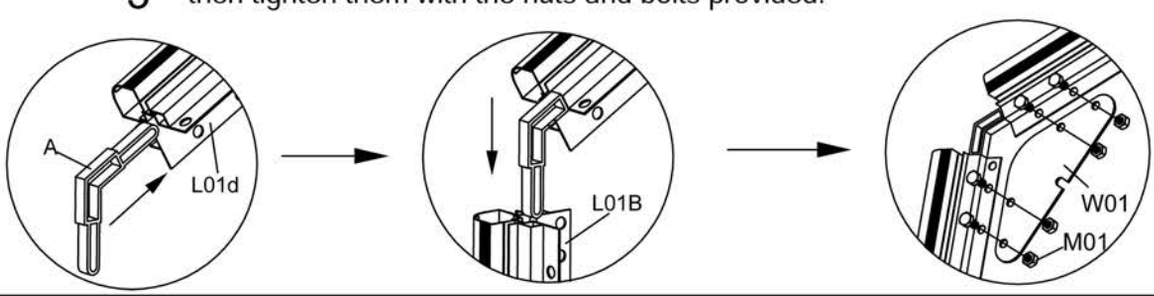

FRAME

montage

Attention:

If you only buy the basic GM34303, there will be only L06A, without L06. If your greenhouse consists of more than one extension module, then you will have more L27 & L06 to extend.

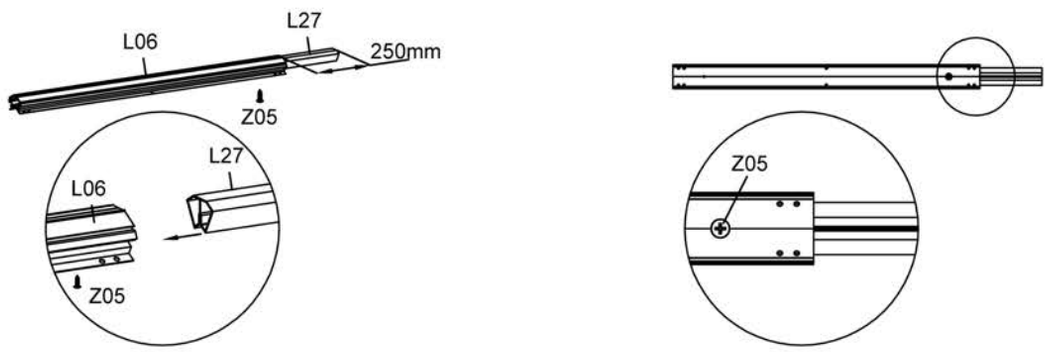

Insert half part of L27 into L06, leaving 250mm length of L27. Then secure L27 and L06 with Z05.

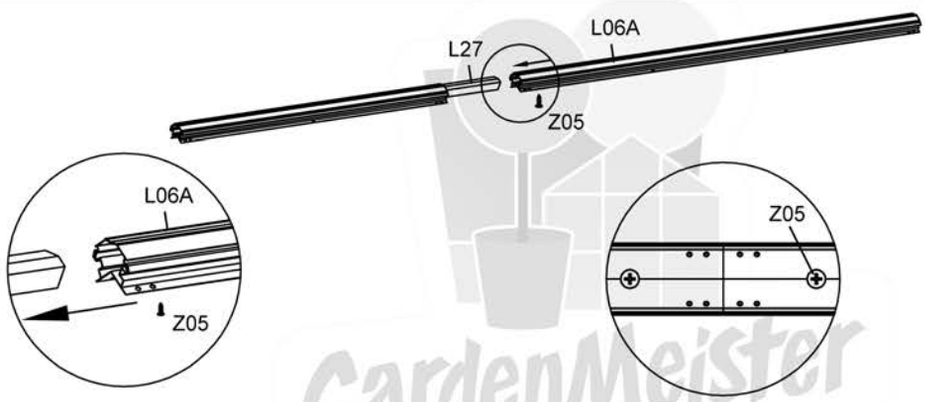

Insert another end of L27 into L06A, and ensure the junction works properly. Then secure them with Z05

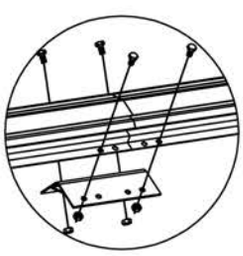

Assemble L06A & L06 through W04 with bolts and nuts.

Put W07 on the junction of L06A & L06, then drill the holes on L06A & L06 through the holes of W07, Dia.3.2mm.

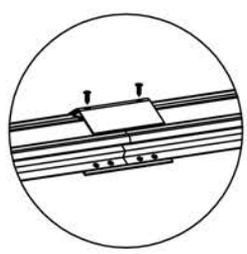

Tighten W07 with Z01.

FRAME

montage

NL

Please follow these steps if your order includes decorative cresting.

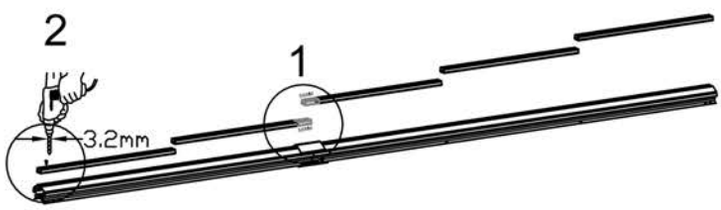

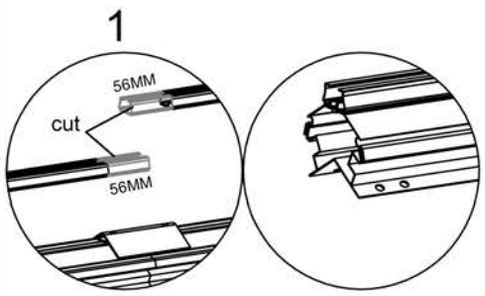

Cut off 56mm from two profiles, L26, near to W07, and then install all L26 onto L06A & L06, making sure L26 matches the lengths of L06A & L06 (See Fig. above).

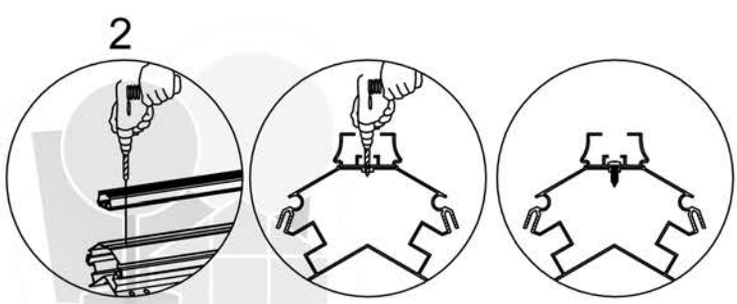

Drill one hole on both sides of L26, Dia.3.2mm, 150mm from centre of each L26, through L06A & L06, and then tighten them with Z01 (see Fig. above).

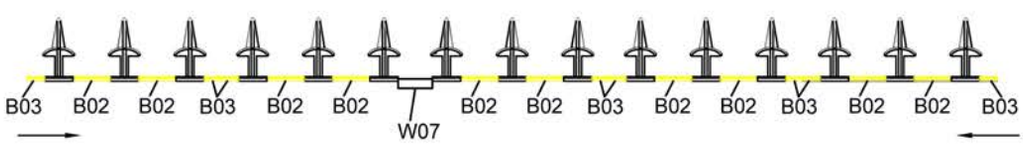

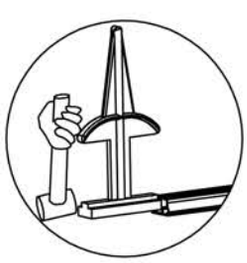

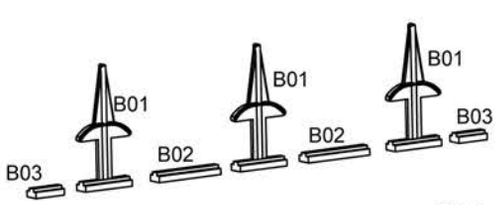

Slide B01, B02 and B03 into each side of L26 in the correct order. Use a rubber mallet if needed.

FRAME
montage

Attention:

If you only buy the basic GM34303, there will be only L07A, without L07. If your greenhouse consists of more than one extension module, then you will have more L07 to extend.

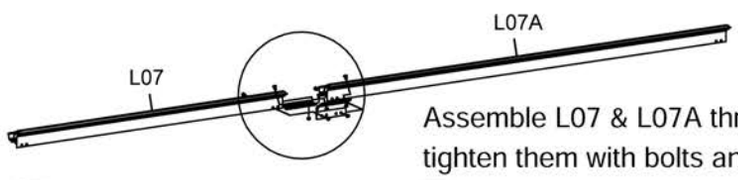

Assemble L07 & L07A through W03 & W04, and tighten them with bolts and nuts (see Fig. below).

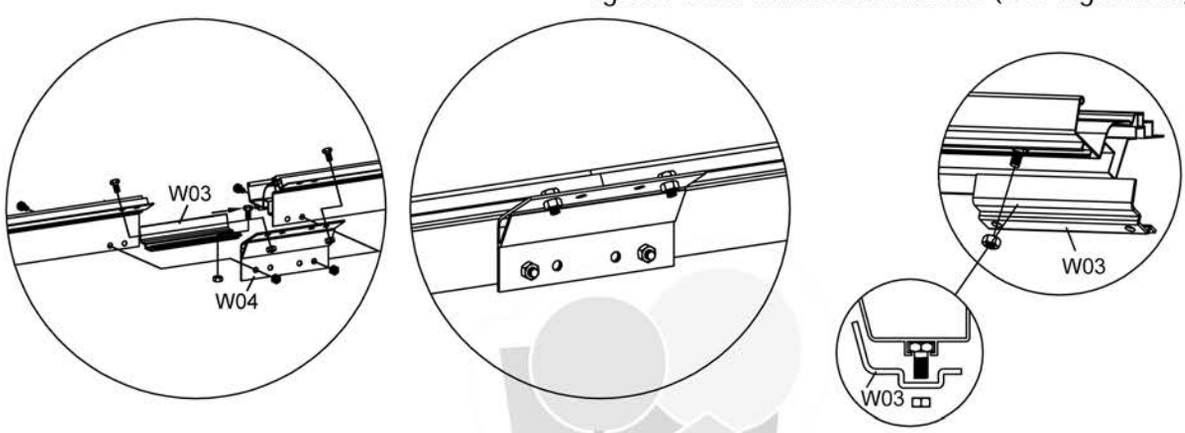

Install the ridge section with two nuts and bolts at each end.

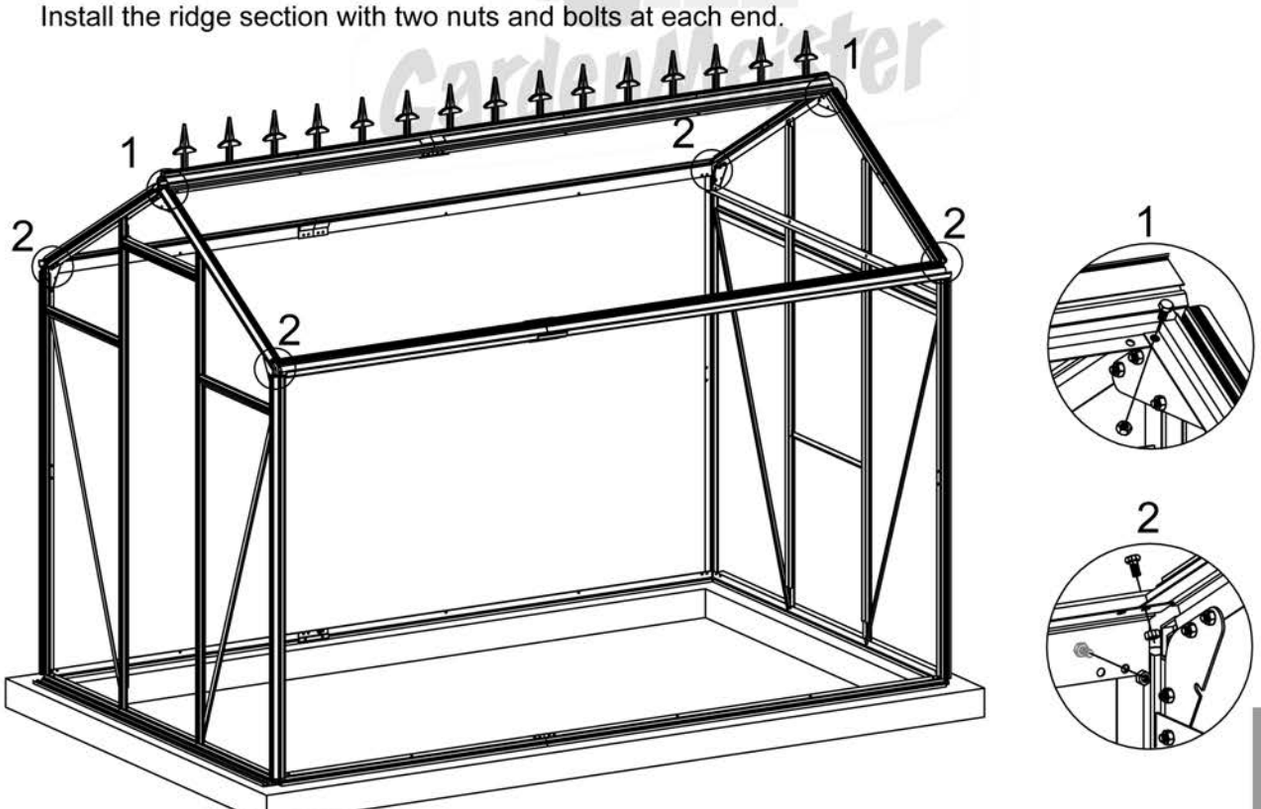

FRAME

1 montage

* When installing the L22C before tightening the nuts and bolts, push up from under the ridge near the join to ensure the entire ridge is straight.

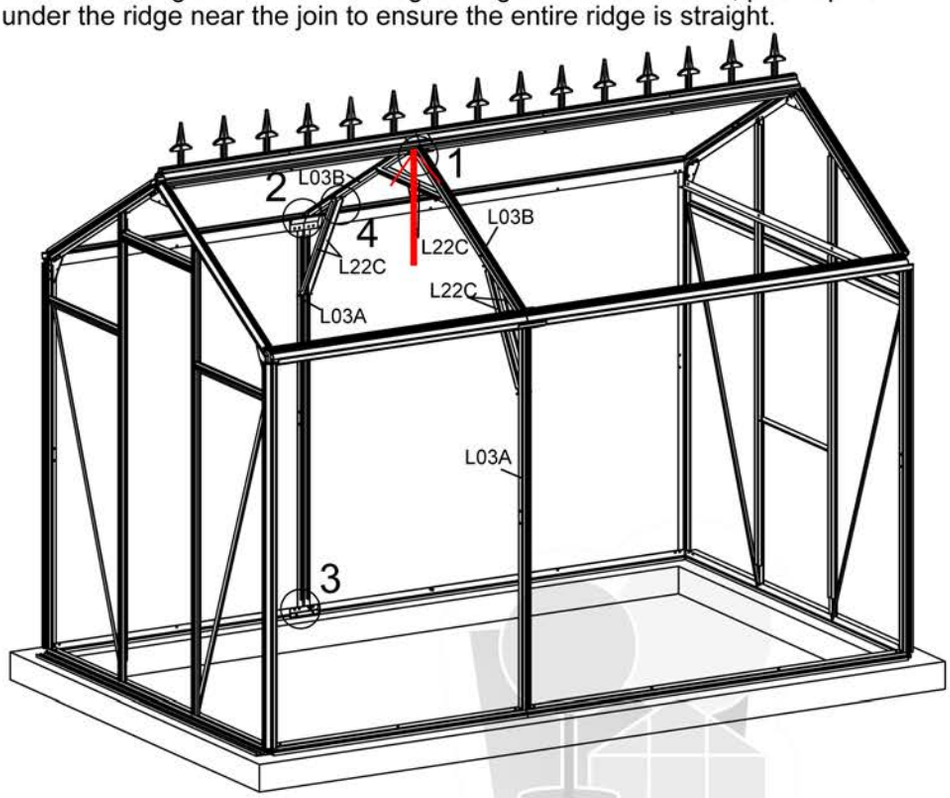

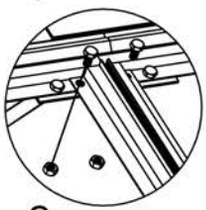

2

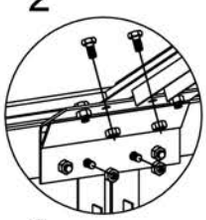

3

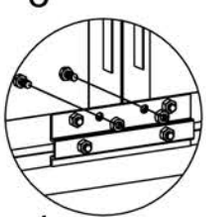

4

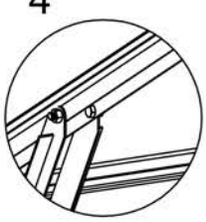

* Also ensure the eave profiles are running true and straight from end to end before tightening the L22Cs at the sides. You can also loosen these to make adjustments later.

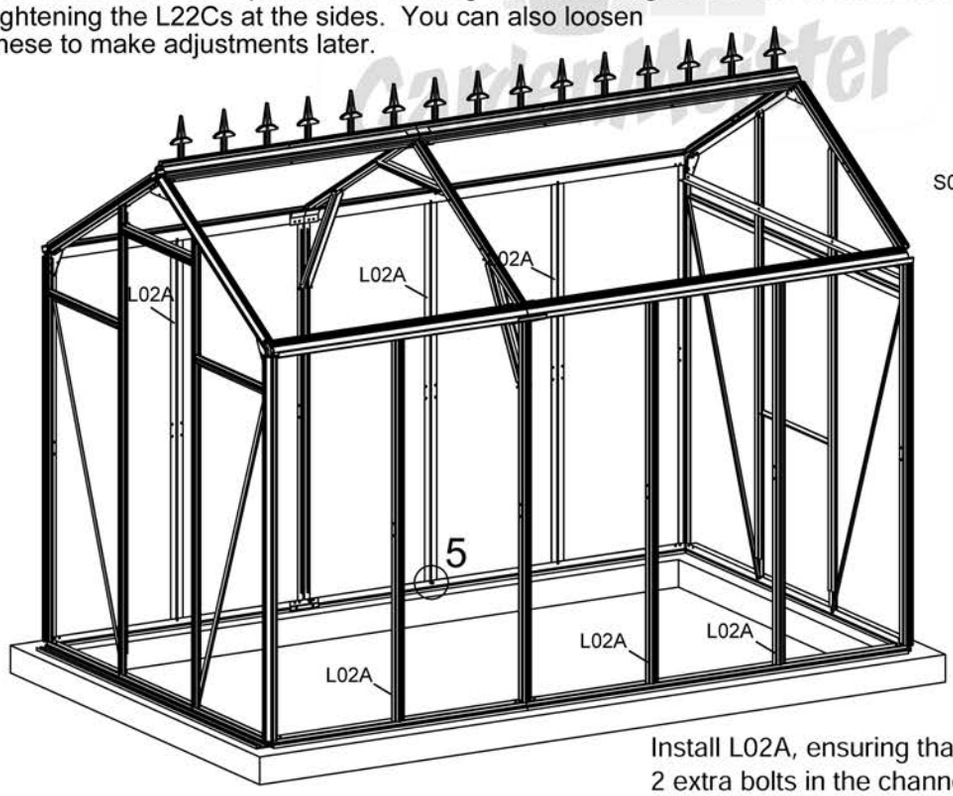

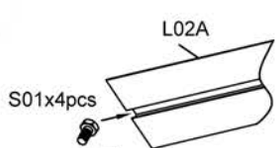

5

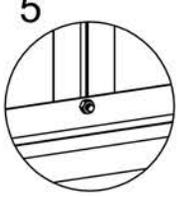

Install L02A, ensuring that you loosely insert 2 extra bolts in the channel, which are needed later to fix the bracing.

FRAME

montage

Install horizontal & diagonal braces as shown to both sides of the greenhouse, ensuring that you loosely insert 1 extra bolt in the channel, which is needed later to fix the bracing L22A & L22B

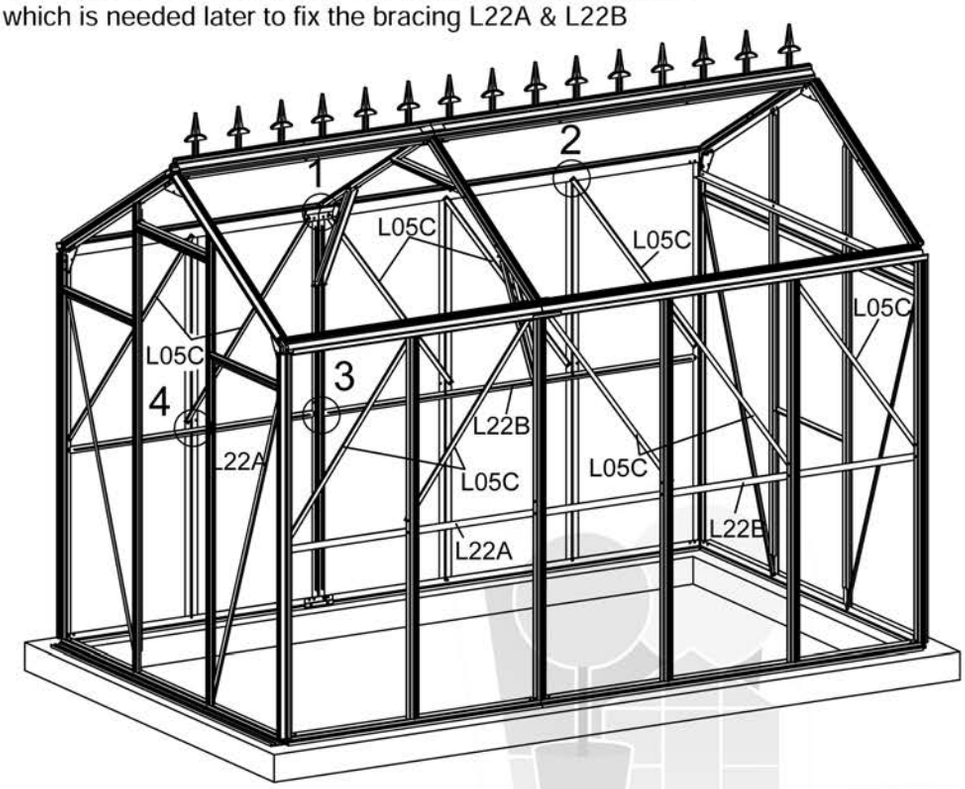

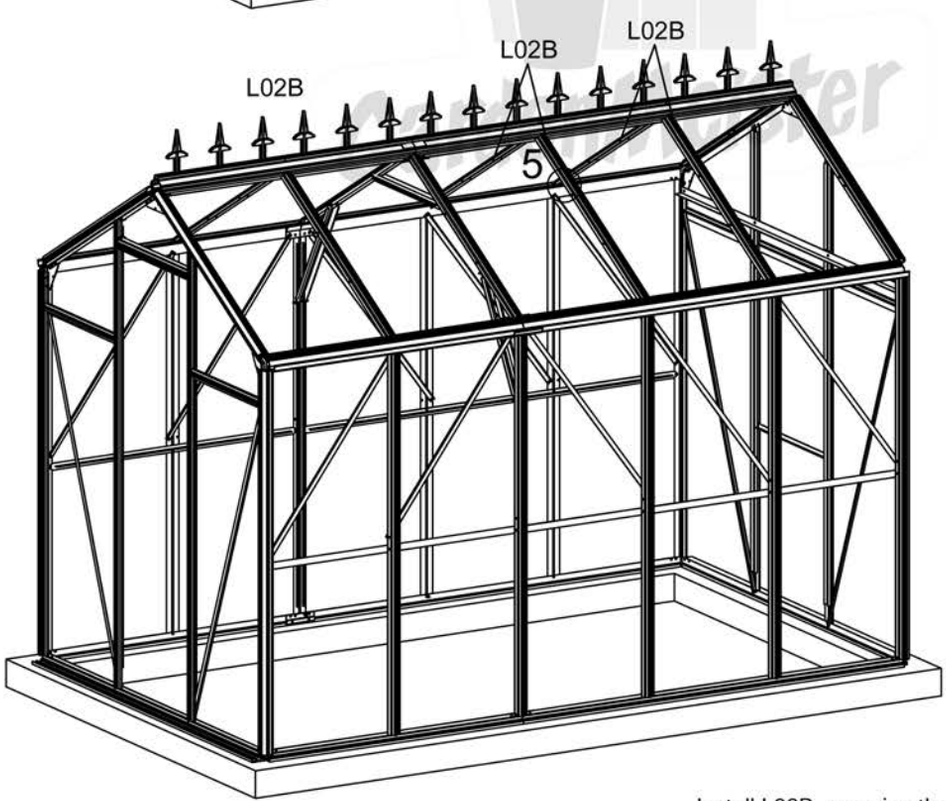

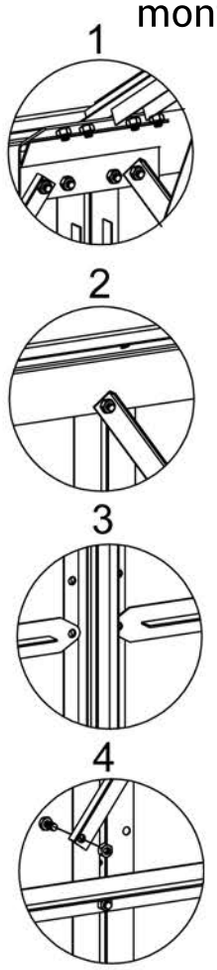

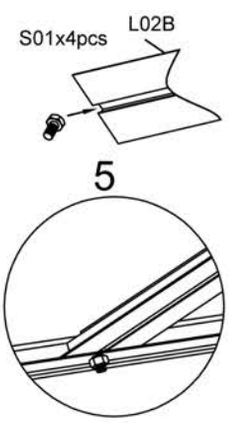

Install L02B, ensuring that you insert 3 extra bolts in the channel, which are needed later to fix the bracing.

FRAME
montage

Install the L04A vent frame profile and the W08 handle frame profile.
Handle frame W08 is not required if auto openers are installed.
Install L04A and L05D at the same time.
When installing L05D ensure that you leave one bolt in the bolt channel for L22.
Install the L22 ridge and eaves struts.
The L22 struts are fitted horizontally at the ridge and diagonally at the eaves.

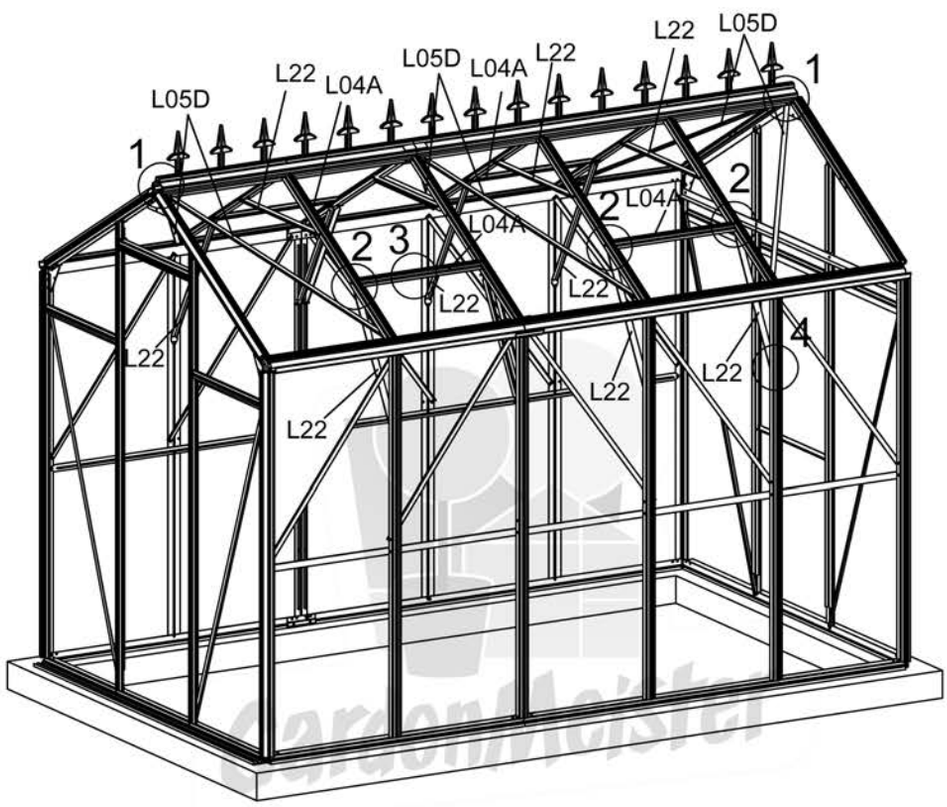

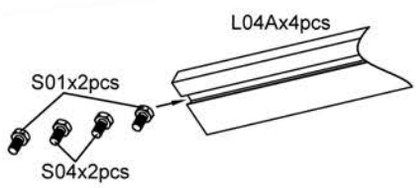

Ensure 2 bolts are inserted in the bolt channel for the W08 handle.

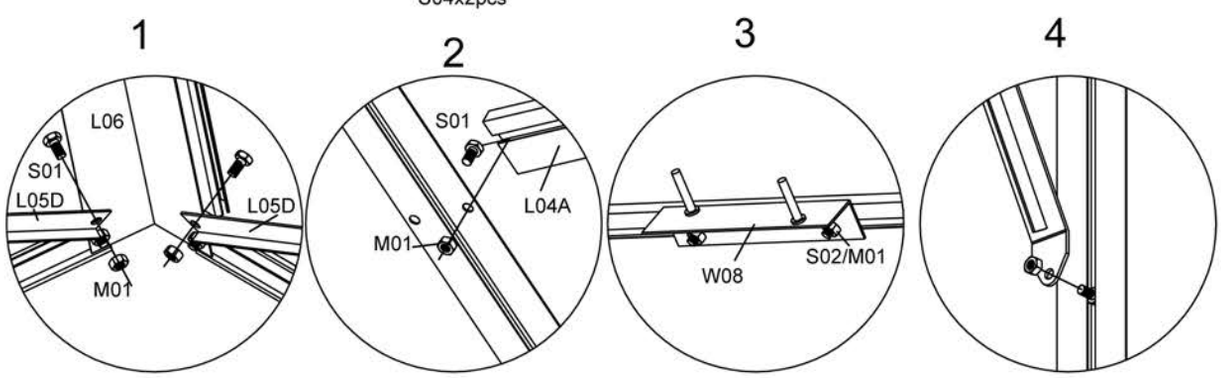

The frame is now complete. Once you start the glazing ensure that you complete it.
Do not leave the greenhouse half glazed as this may cause damage.

PANELEN

montage

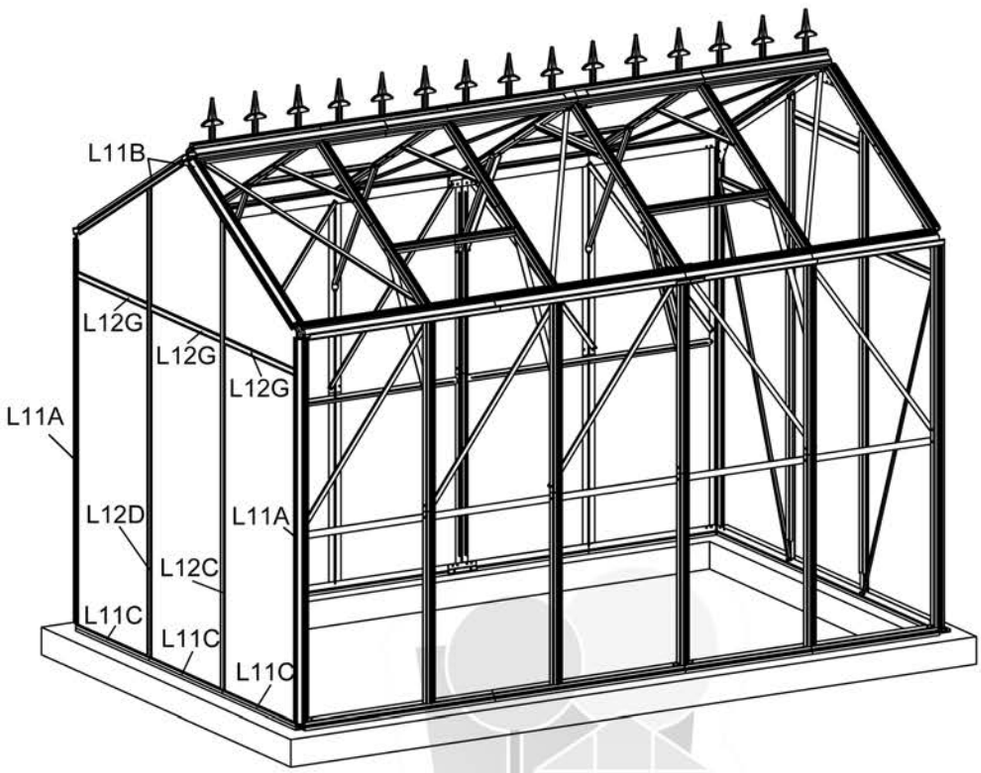

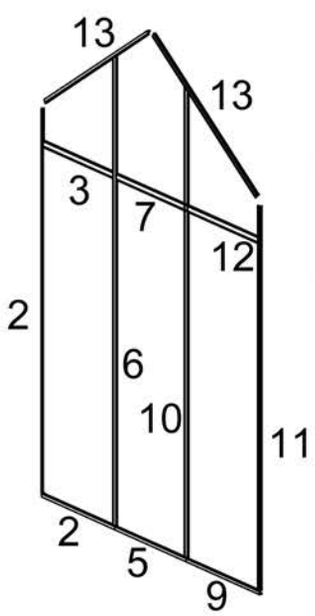

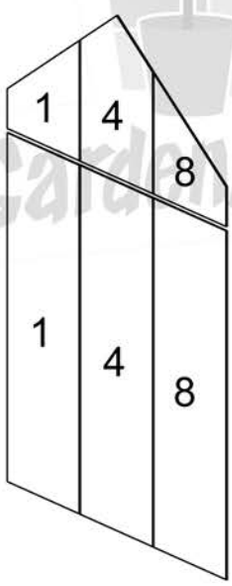

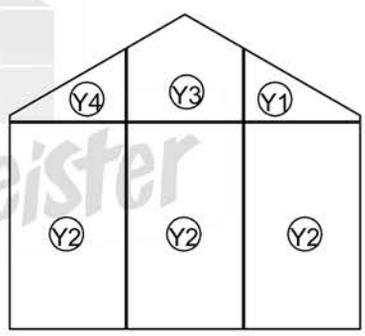

First the glazing panels
should be loosely retained by the bar capping
profiles as shown in the detail drawings.
Next tap the bar capping gently
into position with a rubber mallet.

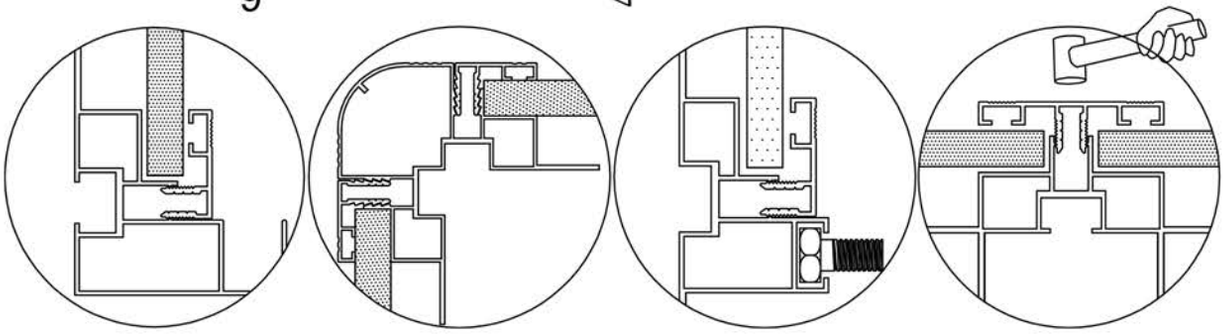

PANELEN

montage

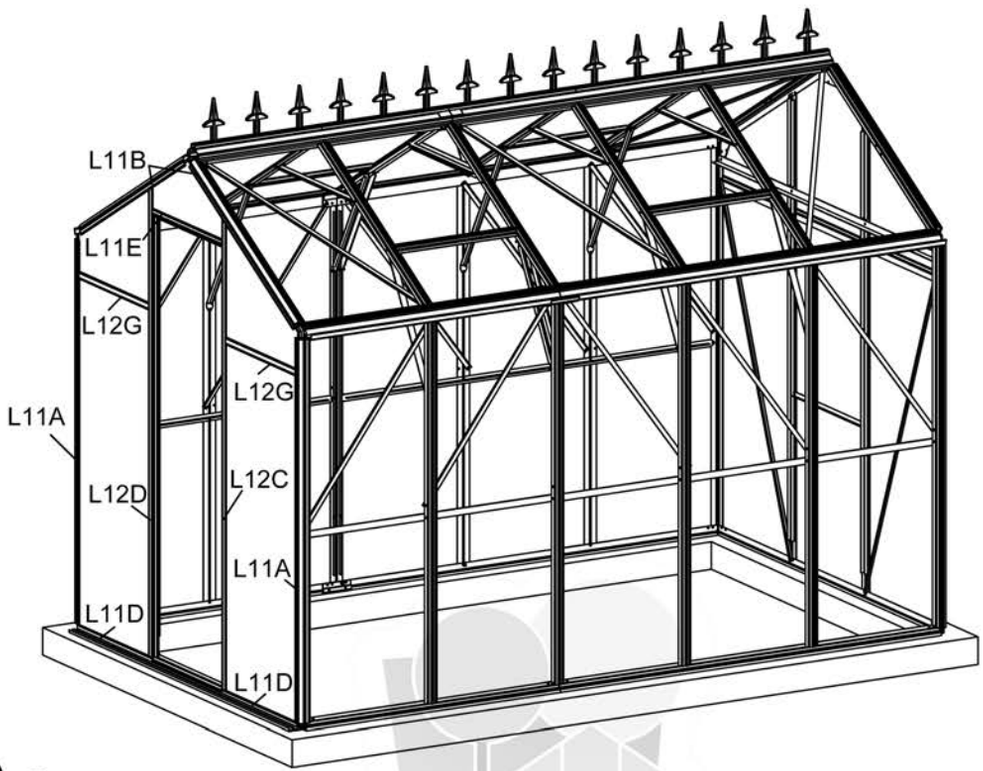

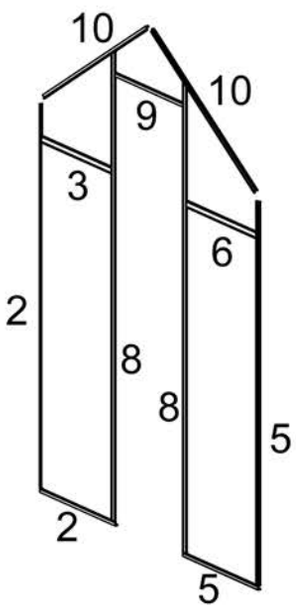

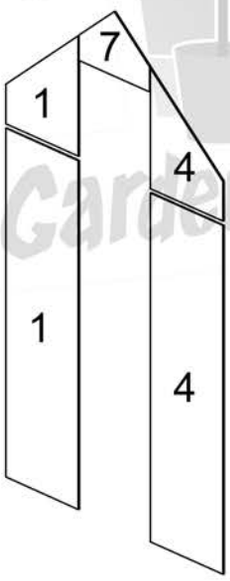

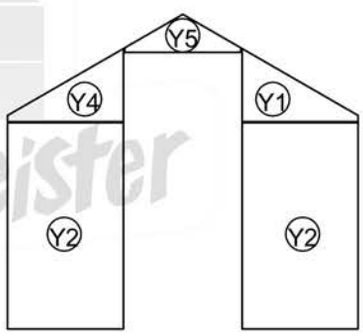

First the glazing panels
should be loosely retained by the bar capping
profiles as shown in the detail drawings.
Next tap the bar capping gently
into position with a rubber mallet.

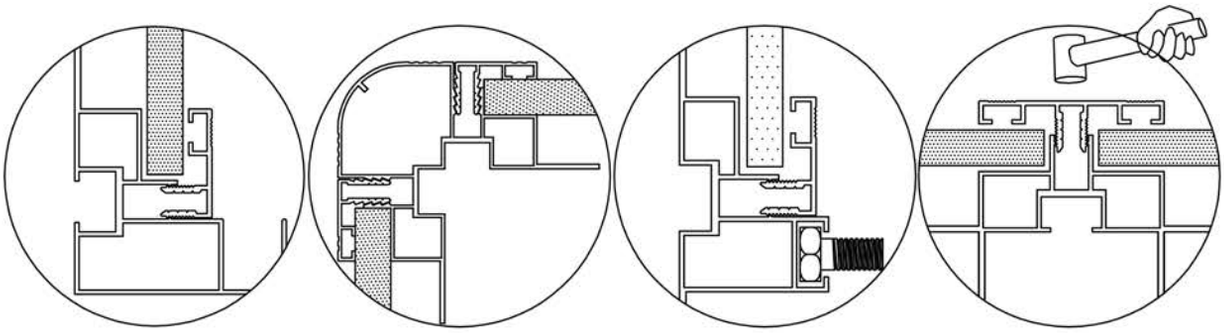

PANELEN

montage

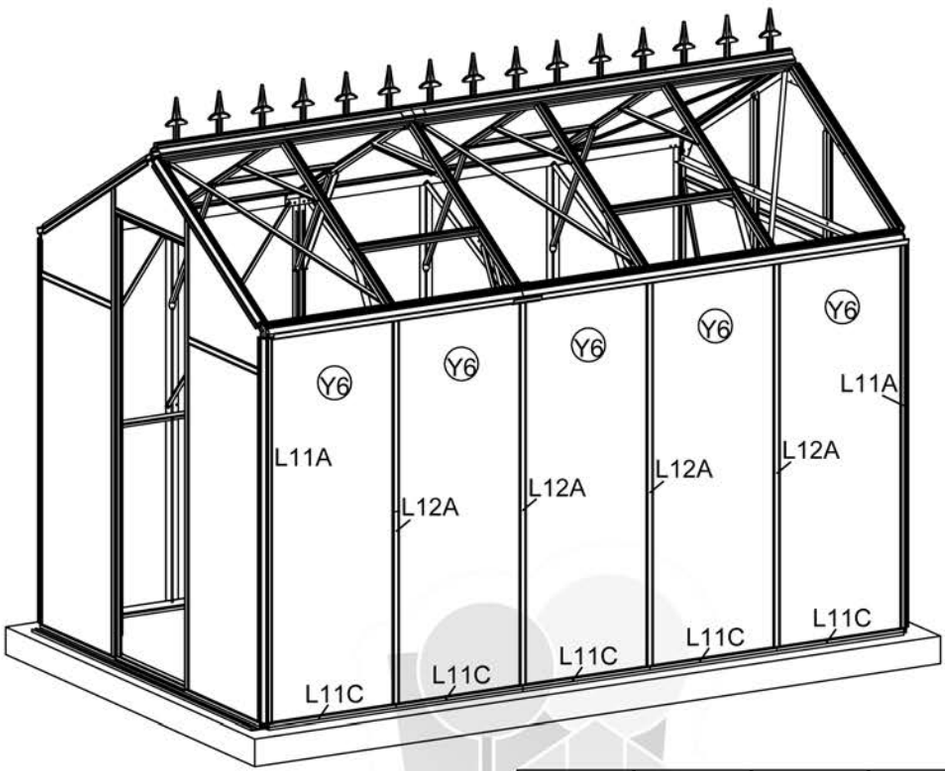

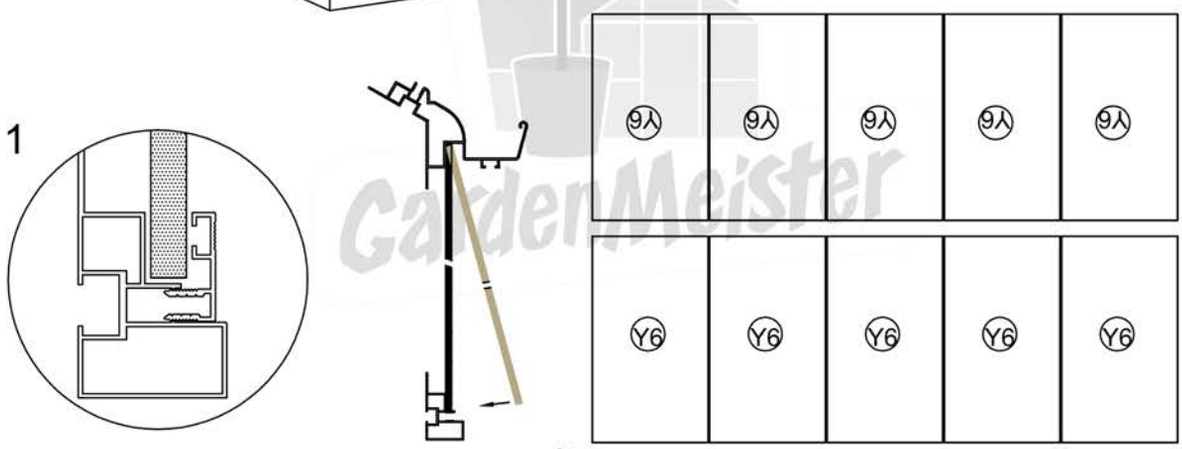

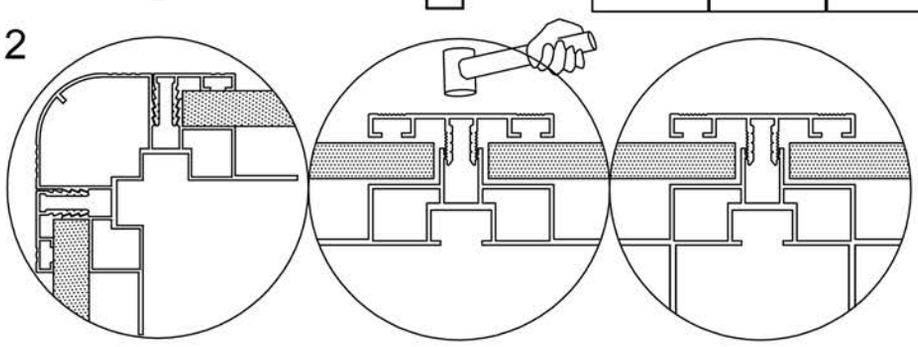

Slide all Y6 glazing panels into place. The top of the panels should be pushed up behind the gutter profile, then pushed in against the base profile as shown in the detail drawings. The panels should be loosely retained by the glazing bar capping L11A, L11C and L12A then tap the bar capping gently into the channels of each frame profile with a rubber mallet.

PANELEN

montage

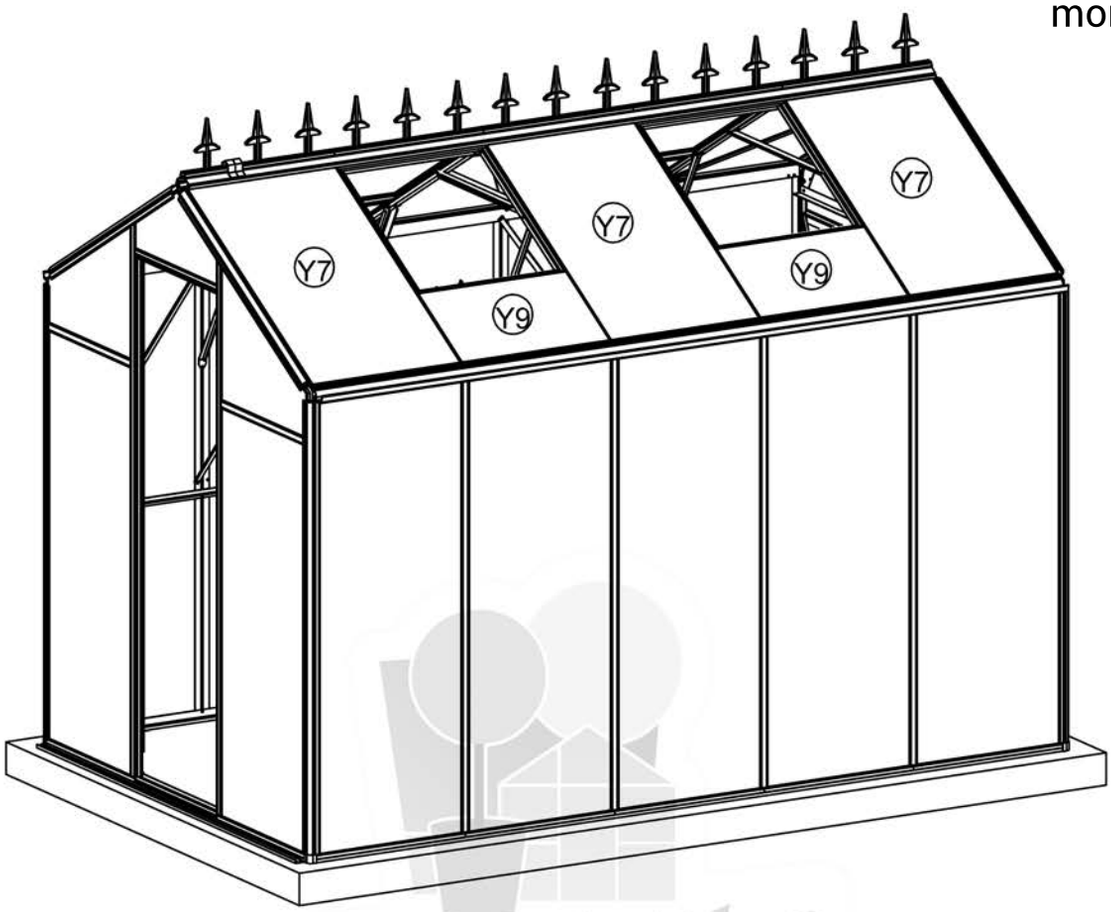

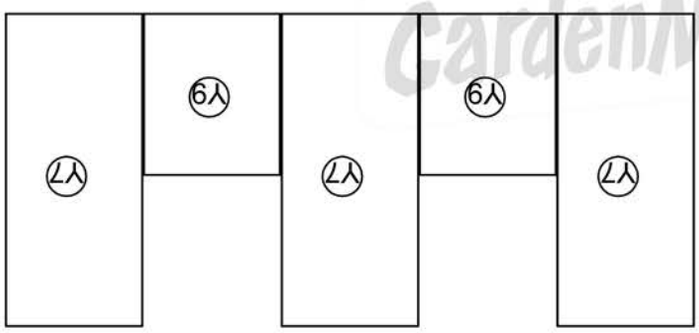

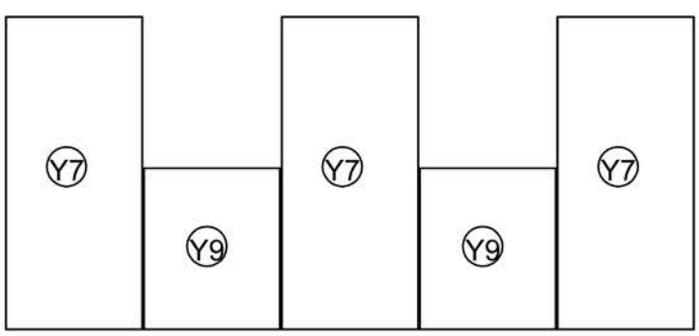

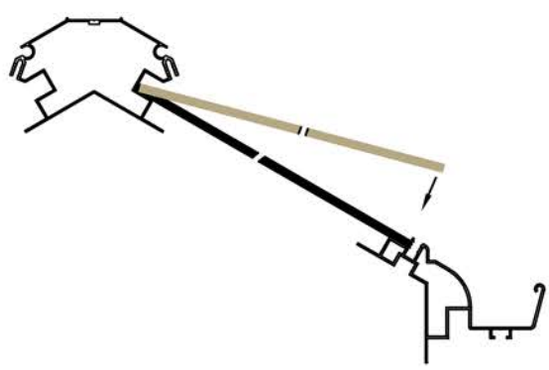

PANELEN

montage

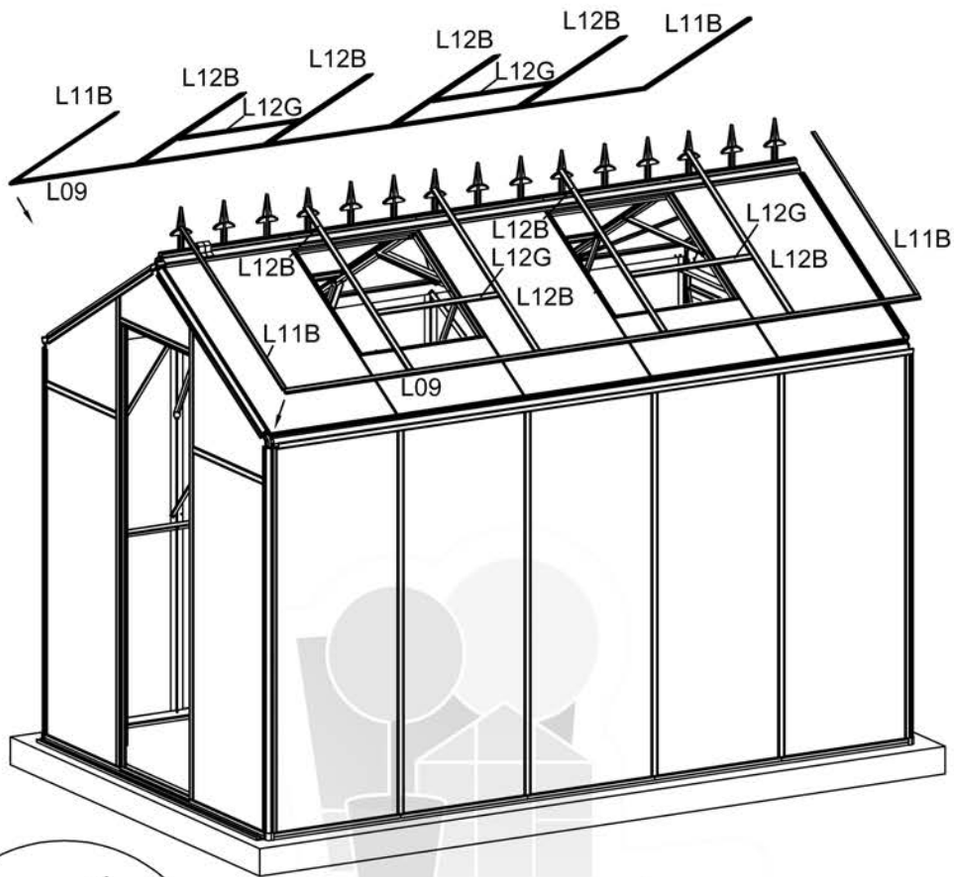

1

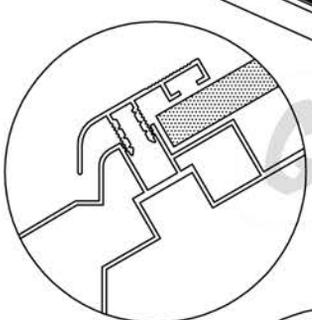

2

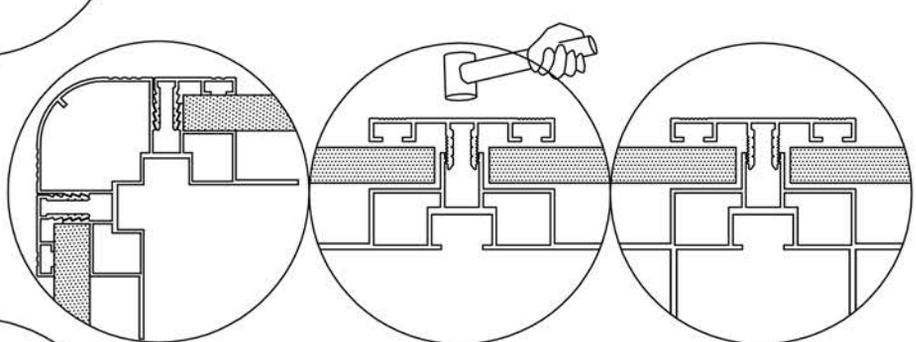

3

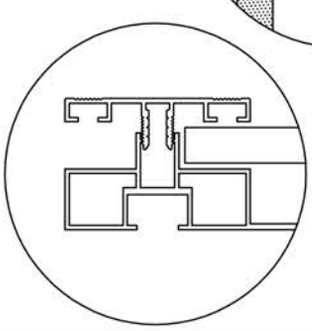

Tap all of the bar capping into the channels of each frame profile with a rubber mallet as shown in the detail drawings.

PANELEN

montage

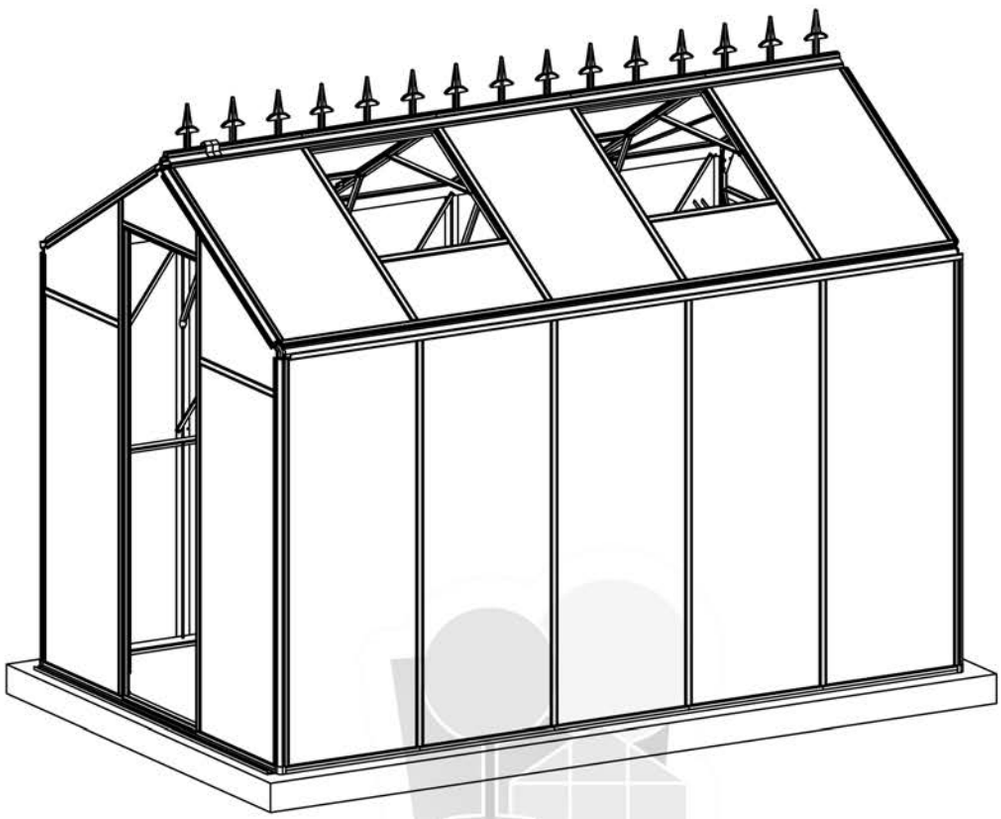

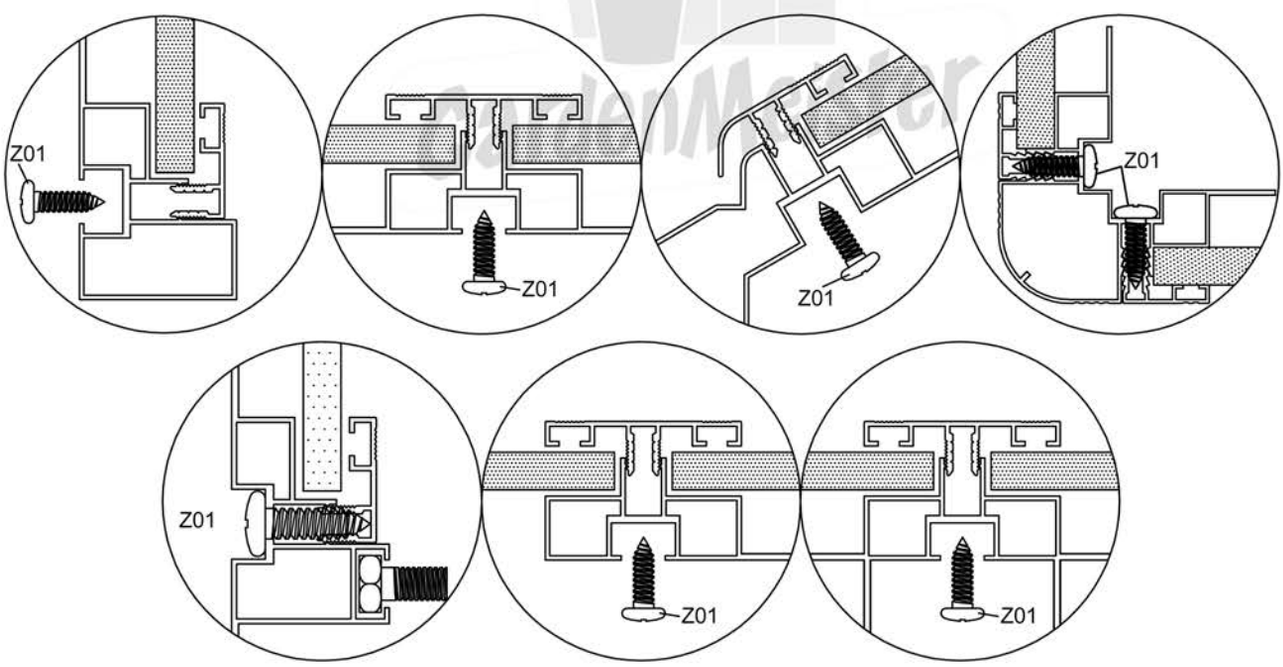

Fix every bar capping profile securely in position using Z01 screws as shown in the detail drawings.

* Be careful not to over tighten but ensure the screws are securely fixed. Ensure the bar capping profiles are pushed firmly against the panel before installing the screws.

PANELEN

montage

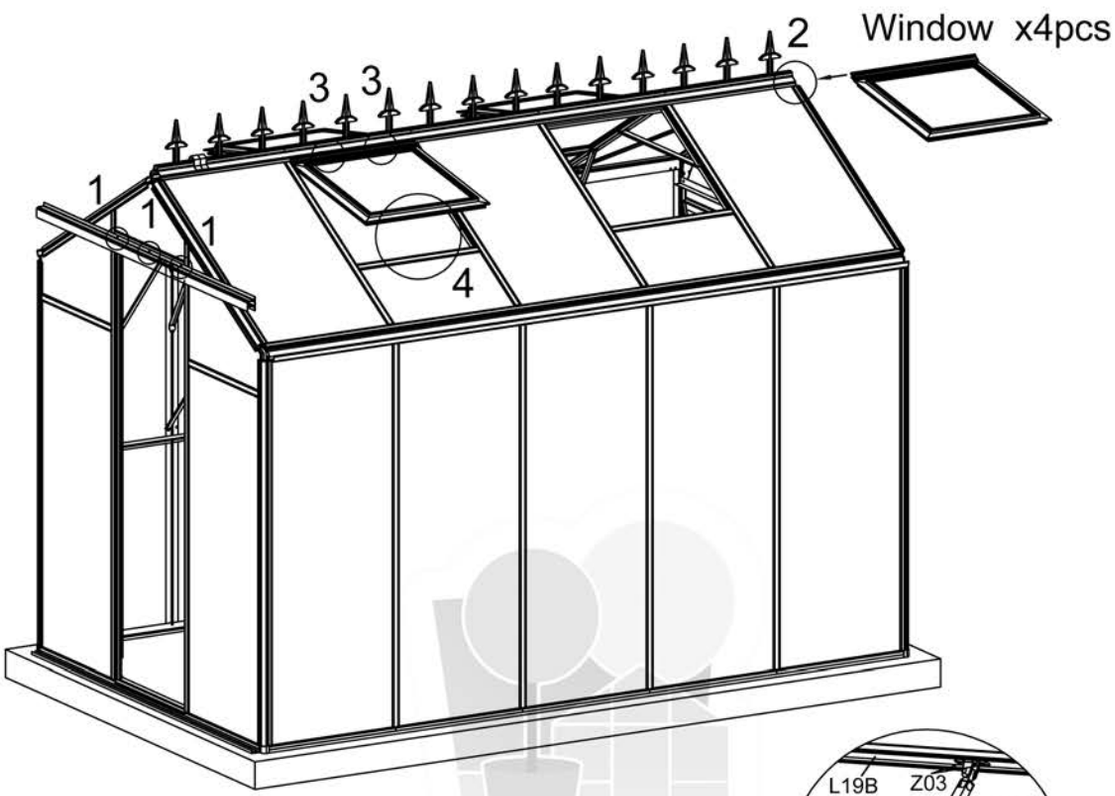

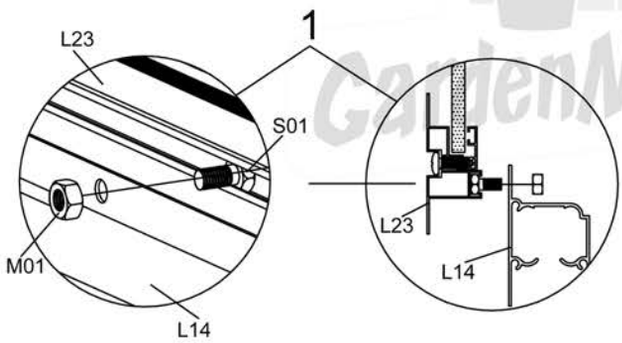

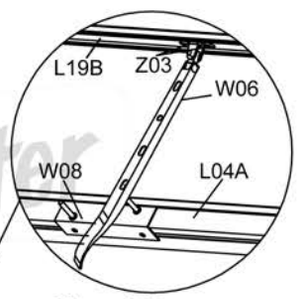

Manual Opener

*Ensure the manual vent is closed as shown.

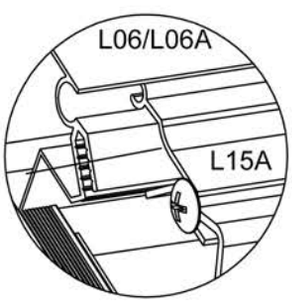

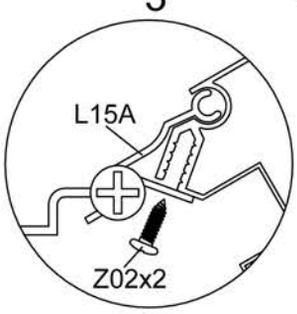

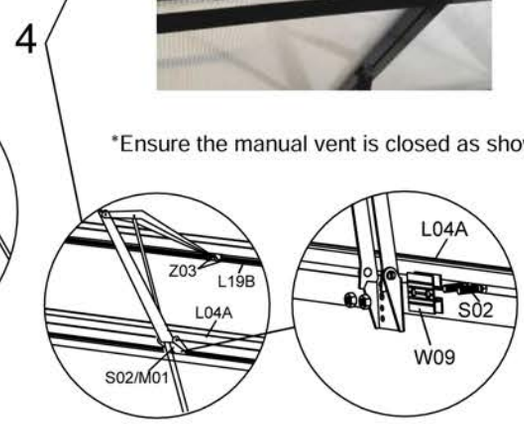

Automatic Opener

Slide L15A along the groove in the L06 ridge
and fix it in the correct position using Z02 screws.

PANELEN

montage

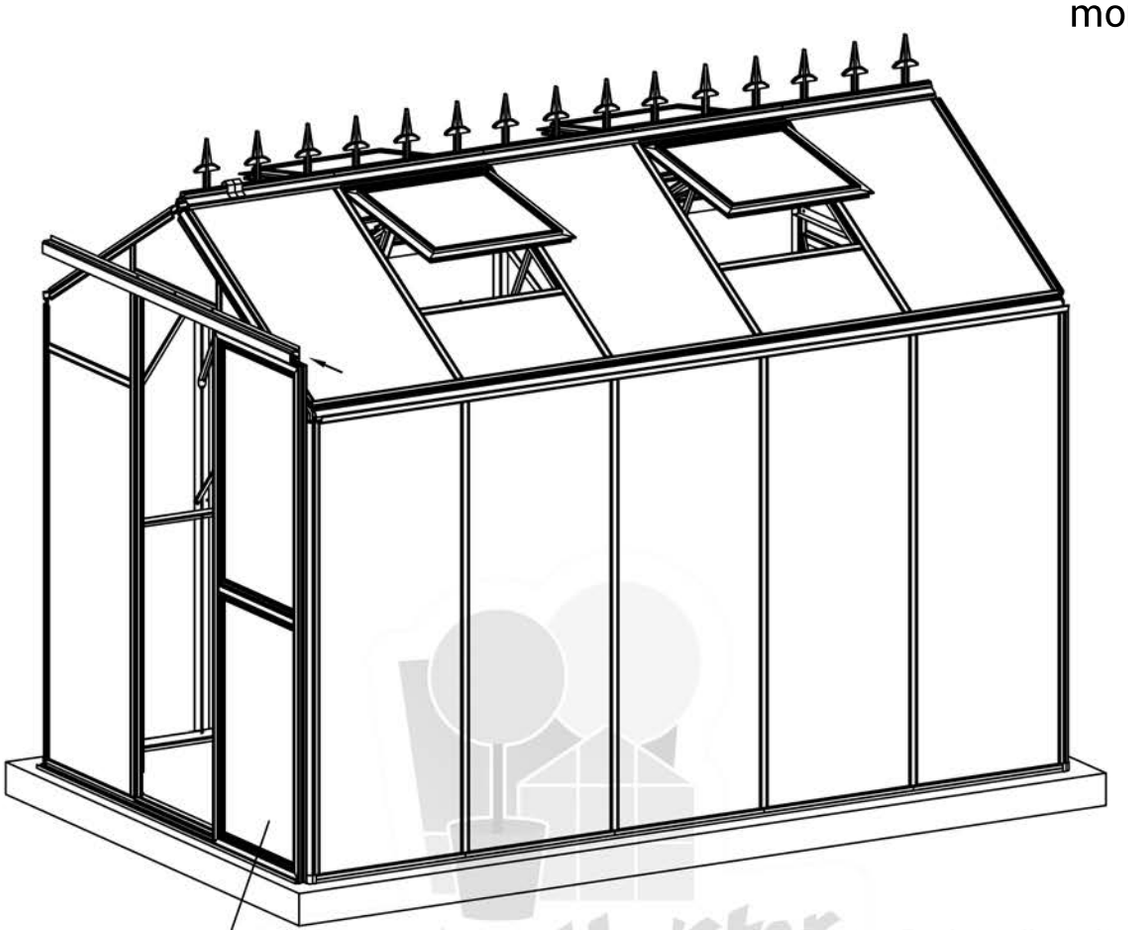

Rotate D, the roller wheels, to adjust the height of the door so it does not bind or rub on the bottom track.

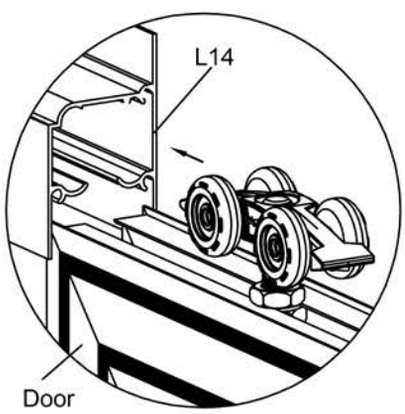

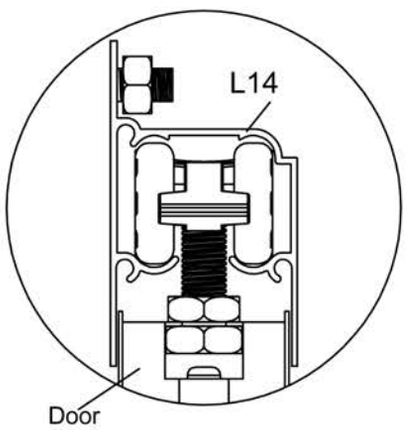

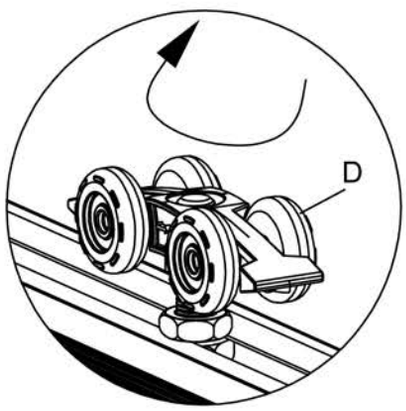

PANELEN

montage

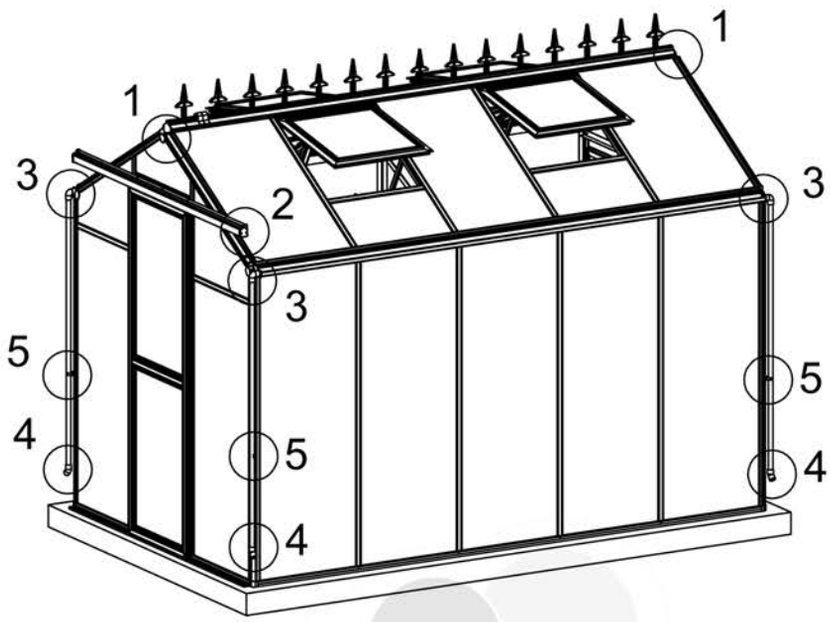

1

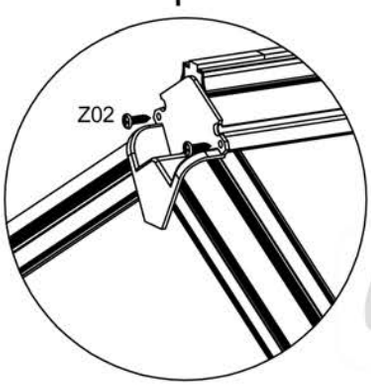

2

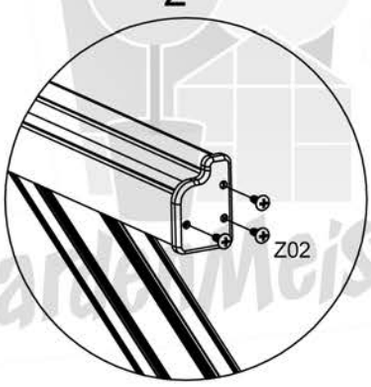

3

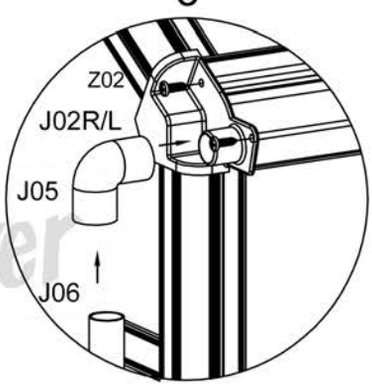

Downpipe Assembly

4

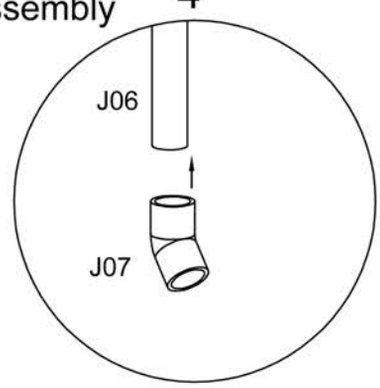

If you wish to eliminate leaks use glue when fixing the downpipe bends (not provided).

5

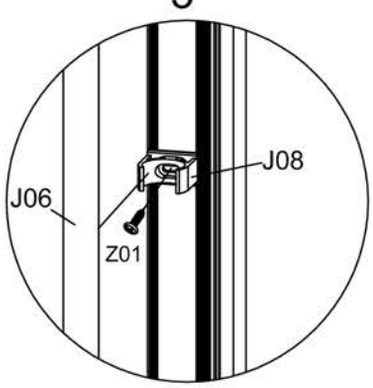

Drill a hole in L01A and L01B, approximately 3mm diameter and 700mm up from the bottom. Fix the J08 downpipe bracket with Z01 screws and then clip the J06 downpipe into the J08 bracket.